

# AN3394 Application note

# Antenna design and impedance matching guidelines for CR95HF multiprotocol contactless transceiver IC

#### Introduction

The goal of this application note is to provide guidelines to design a CR95HF antenna which impedance matches to the CR95HF impedance. This allows to achieve the best RF communications between the CR95HF transceiver integrated circuit (IC) and ISO15693 or ISO14443 RF memory tags.

The DEMO-CR95HF-A is a demonstration board for the CR95HF 13.56 MHz contactless transceiver. It is designed as a ready-to-use circuit board to interface with the CR95HF PC host demonstration software through an USB bus. The DEMO-CR95HF-A is powered by the USB bus and no external power supply is required. It is based on the CR95HF contactless transceiver with a 47x34 mm 13.56 MHz inductive etched antenna and its associated tuning components, and on a STM32F103CB 32-bit microcontroller that communicates with the CR95HF via the USB bus.

This document is structured as follows:

- Description of the DEMO-CR95HF-A board
  - Definition of CR95HF output impedance
  - Use of inductive antenna
  - Impedance matching
- Description of equivalent circuit
  - CR95HF RF circuit modeling and description of antenna impedance matching circuit
  - Calculation of the matching circuit optimized for ISO15693 memory tags
- Read range estimate based on magnetic field calculation method for a rectangular antenna
- Main criteria for key antenna design

October 2011 Doc ID 018754 Rev 5 1/29

Contents AN3394

## **Contents**

1	ription of DEMO-CR95HF-A	. 6	
	1.1	Overview	. 6
	1.2	Output impedance of the DEMO-CR95HF-A demonstration board output circuit	. 7
	1.3	Inductive antenna impedance	. 8
	1.4	Need for impedance matching	. 8
	1.5	Impedance matching circuit	. 9
		1.5.1 Antenna circuit description	9
		1.5.2 Entire equivalent circuit	. 10
2	Appli	cation to DEMO-CR95HF-A demonstration board	13
	2.1	Antenna parameters	13
		2.1.1 Antenna serial equivalent model	13
		2.1.2 Antenna parallel equivalent model	. 14
	2.2	CR95HF receiving circuit equivalent models	14
		2.2.1 CR95HF receiving circuit parallel equivalent model	14
	2.3	Numerical application of C <sub>2</sub> , C <sub>6</sub> , C <sub>3</sub> and C <sub>17</sub>	. 15
3	Read	range estimate	16
	3.1	Magnetic field calculation	16
	3.2	Read range calculation	17
4	Main	criteria for key antenna design	18
	4.1	Inductance of a circular antenna	18
	4.2	Inductance of a spiral antenna	18
	4.3	Inductance of a square antenna	
	4.4	ST antenna calculation tool	
5	Conc	lusion	22
Appendix	(A D	emonstration of C <sub>11</sub> and C <sub>22</sub> calculation	23
1-1-2	A.1	Equivalent circuit	
	,	_qaa.o ooa	

AN3394	Contents

6	Revis	ion history	28
	A.3	Serial to parallel equivalence RC impedance, and example of RC load	26
	A.2	Serial to parallel equivalence RL impedance, and example of RL load $\ldots$	24

List of tables AN3394

## List of tables

Table 1.	K1 and K2 values depending on layout	19
Table 2.	DEMO-CR95HF-A component commended values	22
Table 3.	Document revision history	28

**47/** 

AN3394 List of figures

## **List of figures**


Figure 1.	DEMO-CR95HF-A demonstration board equivalent circuit	6
Figure 2.	CR95HF equivalent output impedance	7
Figure 3.	Chip simplified equivalent impedance	7
Figure 4.	Antenna demonstration board equivalent circuit	8
Figure 5.	Impedance matching	8
Figure 6.	Antenna circuit description	9
Figure 7.	Equivalent circuit of the CR95HF and associated matching circuit	10
Figure 8.	CR95HF matching circuit intermediate simplification	10
Figure 9.	CR95HF parallel matching circuit intermediate simplification	11
Figure 10.	CR95HF final equivalent circuit	11
Figure 11.	Antenna parameters without EMI filter	13
Figure 12.	Antenna serial-to-parallel RL equivalent circuit	14
Figure 13.	CR95HF serial-to-parallel RC circuit equivalence	14
Figure 14.	Circuit including Rinput internal resistor	15
Figure 15.	Rectangular antenna	16
Figure 16.	Read range evolution	17
Figure 17.	Spiral antenna	18
Figure 18.	Square antennas	19
Figure 19.	User interface for planar rectangular coil inductance calculation	
Figure 20.	Rectangular planar antennas	
Figure 21.	DEMO-CR95HF-A circuit	
Figure 22.	Final equivalent circuit	23
Figure 23.	Serial-to-parallel RL equivalent circuit	
Figure 24.	Serial-to-parallel RC equivalent circuit	26

## 1 Description of DEMO-CR95HF-A and criteria for impedance matching

#### 1.1 Overview

Figure 1 shows the part of the circuit concerned by the impedance matching.

Figure 1. DEMO-CR95HF-A demonstration board equivalent circuit

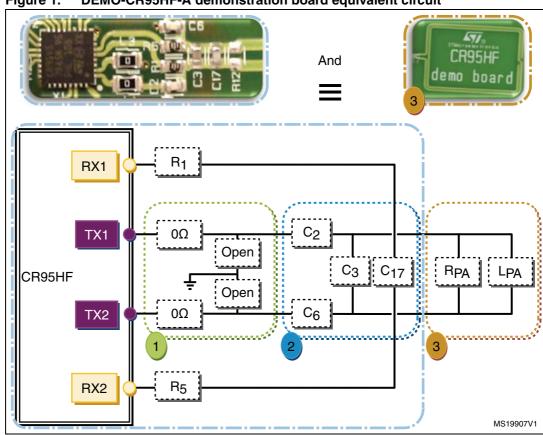

#### **Legend and Abbreviations**

1): EMC Filter: For information on the EMC filter, contact your local ST sales team.

Matching circuit.Inductive antenna.

Block.
■: Pin.

: Component.

TX: CR95HF output driver.
RX: CR95HF receiver input stage.

 $\begin{array}{ll} R_{PA} \colon & \text{Antenna equivalent parallel resistor. } [\Omega] \\ L_{PA} \colon & \text{Antenna equivalent parallel inductance. } [H] \end{array}$ 

 $C_2,C_6$ : Serial capacitance of the matching circuit impedance. [F]  $C_3,C_{17}$ : Parallel capacitance of the matching circuit impedance. [F]

 $R_1, R_5$ : 330  $\Omega$ . These resistors are used to limit the signal level on RX1-RX2. They must be

considered in the calculation of the impedance matching circuit.

**577** 

## 1.2 Output impedance of the DEMO-CR95HF-A demonstration board output circuit

To generate the magnetic field, the antenna is excited by the two CR95HF differential generators (see *Figure 2: CR95HF equivalent output impedance*).


Each generator has an output impedance of 13.5  $\Omega$ .

Z<sub>out</sub> is the CR95HF differential output impedance between TX1 and TX2. It is a pure resistor. The resulting output impedance, R<sub>out</sub>, can be measured as shown in *Figure 3: Chip simplified equivalent impedance*:

$$Z_{out} = R_{out} = 27\Omega$$
 (3V)

Figure 2. CR95HF equivalent output impedance

Figure 3. Chip simplified equivalent impedance

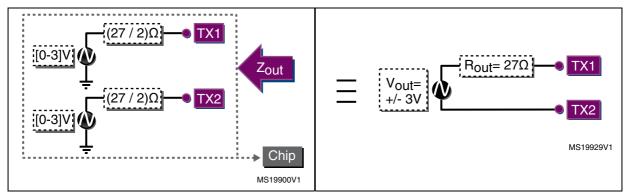

#### Where

 $Z_{out}$ : Matching impedance. [ $\Omega$ ]  $R_{out}$ : Matching resistor. [ $\Omega$ ]

V<sub>out</sub>: Supply voltage of the chip. [V]

#### 1.3 Inductive antenna impedance

The CR95HF requires an inductive antenna to communicate at a frequency of 13,56 MHz. The equivalent impedance (Z<sub>load</sub>) of the inductive loop antenna is shown in *Figure 7:* Equivalent circuit of the CR95HF and associated matching circuit.

DEMO-CR95HF-A antenna dimensions are 47 mm x 34 mm.

Figure 4. Antenna demonstration board equivalent circuit



#### Where

 $Z_{load}$ : Antenna equivalent parallel impedance. [ $\Omega$ ]

 $R_A$ : Antenna equivalent series resistor.  $[\Omega]$ 

L<sub>A</sub>: Antenna equivalent series inductance. [H]

#### 1.4 Need for impedance matching

The antenna equivalent impedance described in *Section 1.3: Inductive antenna impedance* does not meet this condition.

The measure of Z<sub>load</sub> gives:


#### Equation (I.4)

$$Z_{load} = (0.6 + j \times 36.6)\Omega$$

To achieve the maximum power transfer between the CR95HF and its inductive antenna, impedance matching must therefore be performed between  $Z_{out}$  and  $Z_{load}$ . It allows to:

- Optimize the read range
- Transmit the maximum power
- Optimize the chip consumption
- Maximize the radiated magnetic field

 Figure 5. Impedance matching




#### 1.5 Impedance matching circuit

#### 1.5.1 Antenna circuit description

The impedance matching circuit is composed of a serial capacitance circuit ( $C_2$  and  $C_6$ ) and a parallel capacitance circuit ( $C_3$  and  $C_{17}$ ).

Successive impedance transformation allows to simplify the antenna equivalent circuit and to calculate  $C_2$ ,  $C_6$ ,  $C_3$  and  $C_{17}$  capacitances easily.

Figure 6. Antenna circuit description

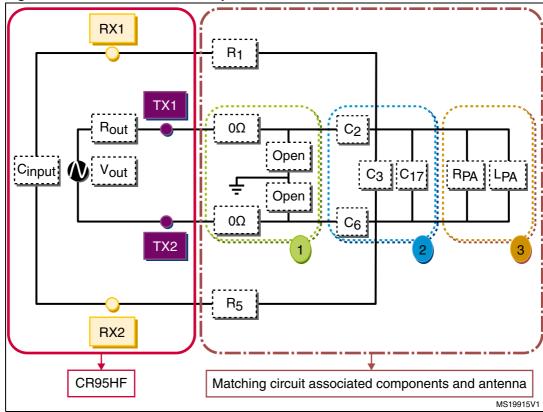

#### Where

 $R_1, R_5$ : 330  $\Omega$ . These resistors are used to limit the signal level on RX1-RX2. They must be considered in the calculation of the impedance matching circuit.

 $C_{input}$ : 22 pF.  $C_{input}$  is the integrated capacitor between RX1-RX2. As  $R_1$ ,  $R_5$ , it must be considered for the impedance matching circuit.

MS19905V1

#### 1.5.2 Entire equivalent circuit

Without the EMI filter, the circuit is reduced as shown in Figure 7: Equivalent circuit of the CR95HF and associated matching circuit.

RX1 Rout Cinput Vout C<sub>17</sub>

Equivalent circuit of the CR95HF and associated matching circuit Figure 7.

From antenna point of view, the CR95HF receiving circuit impedance (R<sub>1</sub>, R<sub>5</sub> and C<sub>input</sub>) is in parallel of C<sub>3</sub>,C<sub>17</sub> as described in the equivalent circuit shown in Figure 8: CR95HF matching circuit intermediate simplification. R<sub>1</sub> and R<sub>5</sub> are equal and can be replaced by R<sub>RX</sub>.

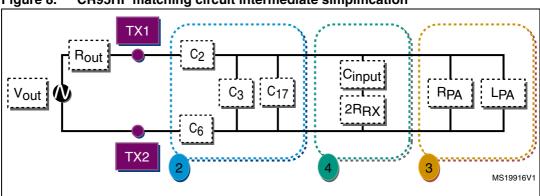


Figure 8. CR95HF matching circuit intermediate simplification

#### Where


RX2

input impedance of the CR95HF reception circuit

Both serial capacitances ( $C_2$  and  $C_6$ ) are equivalent to a serial capacitance  $C_{11} = C_2/2 = C_6/2$ . Both parallel capacitances ( $C_3$  and  $C_{17}$ ) are equivalent to a parallel


10/29 Doc ID 018754 Rev 5 capacitance  $C_{22} = (C_3 + C_{17}).C_{input}$ , and  $R_{RX}$  can be transformed in a parallel equivalent circuit (see *Figure 9: CR95HF parallel matching circuit intermediate simplification*).

Figure 9. CR95HF parallel matching circuit intermediate simplification

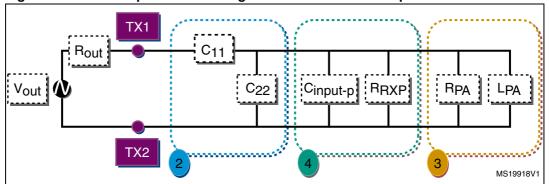

The resulting equivalent circuit allows to calculate the matching circuit composed of  $C_{11}$  and  $C_{22}$  that satisfies the condition  $Z_{out} = Z_{eq}^{\phantom{eq}}$  where  $Z_{eq}^{\phantom{eq}}$  is the complex conjugate of  $Z_{eq}$ .

Figure 10. CR95HF final equivalent circuit

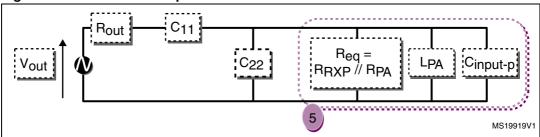

#### Where



: Equivalent circuit.

The calculation described in Equation (A.I.7) and Equation (A.I.9) leads to:

$$C_{11} = \frac{1}{R_{eq} \times \omega} \times \sqrt{\left(\frac{R_{eq}}{R_{out}} - 1\right)}$$

$$C_{22} = \frac{1}{L_{eq} \times \omega^2} - C_{11} - C_{input-p}$$

Where

 $R_{RXP}$ : Equivalent parallel resistor of  $R_{RX}$ . [ $\Omega$ ]

 $C_{11}$ : Equivalent serial capacitance of  $C_2$  and  $C_6$  capacitances. [F]  $C_{22}$ : Equivalent serial capacitance of  $C_3$  and  $C_{17}$  capacitances. [F]

Zeq: Equivalent impedance of circuits 2, 3 and 4.

## 2 Application to DEMO-CR95HF-A demonstration board

This section describes in detail the numerical application corresponding to the DEMO-CR95HF-A demonstration board.


If your application requires a different antenna, use the DEMO-CR95HF-A Gerber files available for http://ww.st.com to design your own antenna. Guidelines on how to design an antenna can be found in *Section 4: Main criteria for key antenna design*.

#### 2.1 Antenna parameters

This section describes part 3 of circuit shown in *Figure 9: CR95HF parallel matching circuit intermediate simplification*.

#### 2.1.1 Antenna serial equivalent model

 Figure 11. Antenna parameters without EMI filter



Where values from *Equation (I.4)* give:

 $R_A = 0.6 \Omega$  and  $L_A = 36.6^* \omega$ .

As a result,  $L_A = 430 \text{ nH}$ .

The capacitance is included in the inductance presented above. As a result:

#### **Equation (II.1)**

$$Q_A = \frac{\left| [IM(Z_{load})] \right|}{RE(Z_{load})} = \frac{\omega \times L_A}{R_A} = 61, 1$$

Where

Q<sub>A</sub>: Antenna quality factor, defined with antenna parameter.


IM(x): Imaginary part of the complex number x.

RE(x): Real part of the complex number x.

ω: Resonance pulsation [rad/s]. ω = 2π f with f = 13.56 MHz.

#### 2.1.2 Antenna parallel equivalent model

 Figure 12. Antenna serial-to-parallel RL equivalent circuit



The values given hereafter are the numerical application of *Equation* (A.II.5) and *Equation* (A.II.6):

 $R_{PA} = 2238 \Omega$ 

 $L_{PA} = 430,1 \text{ nH}$ 

#### Where

 $Z_{load}$ : Antenna equivalent series impedance. [ $\Omega$ ]


 $Z_{loadP}$ : Antenna equivalent parallel impedance. [ $\Omega$ ]

### 2.2 CR95HF receiving circuit equivalent models

#### 2.2.1 CR95HF receiving circuit parallel equivalent model

This section describes part 4 of the circuit shown in *Figure 9: CR95HF parallel matching circuit intermediate simplification*.

 Figure 13. CR95HF serial-to-parallel RC circuit equivalence




The values hereafter are the numerical application of *Equation* (A.III.5) and *Equation* (A.III.6):

 $R_{RXP} = 1091 \Omega$ 

 $C_{input-p} = 8.69 pF$ 

The circuit includes a 80 k $\Omega$  R<sub>input</sub> in parallel with Z<sub>RXP</sub> as shown in *Figure 14: Circuit including Rinput internal resistor*. For more details, refer to the CR95HF datasheet. R<sub>input</sub> resistance should be neglected as demonstrated below.

 Figure 14. Circuit including R<sub>input</sub> internal resistor



#### **Equation (II.2)**

$$R_{RXP}^{1} = \frac{R_{RXP} \times R_{input}}{R_{RXP} + R_{input}}$$

Numerical application of Equation (II.2):

$$R_{RXP}^{1} = 1077\Omega$$

The coefficient error is:  $\frac{\Delta R_{RXP}}{R_{RXP}^{-1}} = \frac{1091 - 1077}{1091 + 1077} = 0,67$  % of error.

R<sub>input</sub> is equivalent to an open circuit, and can be neglected.

#### Where

 $Z_{RX}$ : Antenna equivalent series impedance. [ $\Omega$ ]  $Z_{RXP}$ : Antenna equivalent parallel impedance. [ $\Omega$ ]

 $R_{input}$ : Differential input resistor between RX1/RX2 inputs. [ $\Omega$ ]

## 2.3 Numerical application of $C_2$ , $C_6$ , $C_3$ and $C_{17}$

This section gives the numerical application of part 2 of the circuit shown in *Figure 9: CR95HF parallel matching circuit intermediate simplification*.

The numerical application for Equation (A.I.7) is:

$$C_{11} = 82,2 pF$$

$$C_2 = C_6 = 2.C_{11} = 164,4 \text{ pF}$$

The numerical application for Equation (A.I.9) is:

$$C_{22} = C_3 + C_{17} = 229,4 \text{ pF}$$

To keep the most possible C11 and C22 values and to optimize the performance, the following values have been chosen for  $C_2$ ,  $C_6$ ,  $C_3$  and  $C_{17}$ :

- $C_2 = C_6 = 150 \text{ pF}$
- $C_3 = 220 \text{ pF}$
- $C_{17} = 15 pF$

Read range estimate AN3394


## 3 Read range estimate

This section explains how to obtain the maximum read range between tag and CR95HF.

### 3.1 Magnetic field calculation

For a rectangular antenna, the radiated magnetic field can be estimated using the following formula:

Figure 15. Rectangular antenna

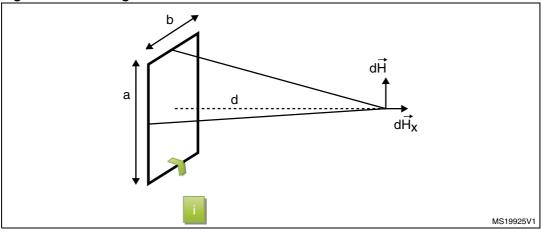

#### **Equation (III.1)**

$$H_{\chi}(d,r) = \frac{2 \times N \times i \times a \times b}{\pi \times \sqrt{\left(a^2 + b^2 + 4 \times d^2\right)}} \times \left(\frac{1}{a^2 + 4 \times d^2} + \frac{1}{b^2 + 4 \times d^2}\right)$$

Where

a: Antenna length. [m]

b: Antenna width. [m]

d: Distance from tag to antenna. [m]

N: Number of turns

i: Current in the antenna. [A rms]

H<sub>x</sub>: Magnetic field. [A/m rms]

rms: Root mean square.

AN3394 Read range estimate

### 3.2 Read range calculation

Figure 16: Read range evolution shows the magnetic field strength radiated by the DEMO-CR95HF-A demonstration board. Neglecting the effect of mutual coupling between the CR95HF antenna and tag, it is possible to estimate the read range for a given tag.

As an example, the minimum operating fields for a M24LR64-R dual mode memory mounted on the ANT1-M24LR-A reference board is around 50 mA/m.

Reporting this value on *Figure 16: Read range evolution* gives an estimated read range of 10 cm.

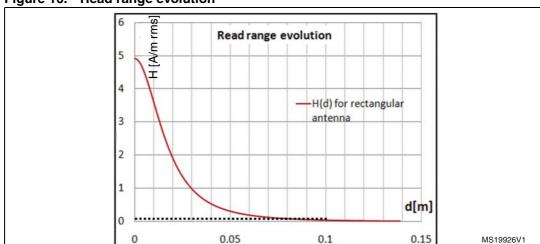


Figure 16. Read range evolution

## 4 Main criteria for key antenna design

The following sections explain how to determine the antenna dimensions for a given value of antenna inductance (L).

#### 4.1 Inductance of a circular antenna

#### **Equation 1**

$$L_{ant} = \mu_0 \times N^{1.9} \times r \times ln(\frac{r}{r_0})$$
, where:

- r is the radius in millimeters
- r<sub>0</sub> is the wire diameter in millimeters
- N is the number of turns
- $\mu_0 = 4\pi \cdot 10^{-7} \text{ H/m}$
- Lant is expressed in Henry

#### 4.2 Inductance of a spiral antenna

#### **Equation 2**

$$L_{ant} = 31.33 \times \mu_0 \times N^2 \times \frac{d_{ant}}{8 d_{ant} + 11c}$$
 , where:

- d<sub>ant</sub> is the mean antenna diameter in millimeters
- c is the thickness of the winding in micrometers
- N is the number of turns
- $\mu_0 = 4\pi \cdot 10^{-7} \text{ H/m}$
- L<sub>ant</sub> is expressed in Henry

Figure 17. Spiral antenna



ai15812

#### 4.3 Inductance of a square antenna

#### **Equation 3**

$$L_{ant} = K1 \times \mu_0 \times N^2 \times \frac{\alpha_{ant}}{1 + K2 \cdot p}$$
, where:

- $d_{ant} = (d_{out} + d_{in})/2$  in millimeters, where:  $d_{out} = outer diameter$  $d_{in} = inner diameter$
- $p = (d_{out} d_{in})/(d_{out} + d_{in})$  in millimeters
- K1 and K2 depend on the layout (refer to *Table 1* for values)

Figure 18. Square antennas

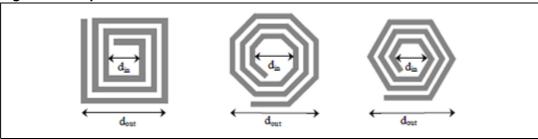


Table 1. K1 and K2 values depending on layout

Layout	K1	K2
Square	2.34	2.75
Hexagonal	2.33	3.82
Octagonal	2.25	3.55

#### 4.4 ST antenna calculation tool

ST provides a simplified software tool (**antenne.exe**) to compute rectangular planar antenna inductances. This tool gives good approximations of the inductance value. It is recommended to verify the obtained results.

ST tool is based on the Grover method (see Equation 4.1: Grover method).

#### **Equation 4.1: Grover method**

 $L_{ant} = L_0 + \sum M$ , where:

- M is the mutual inductance between each of the antenna segments
- L<sub>0</sub> is as given by

#### **Equation 4.2**

$$L_0 = \sum_{j=1}^{s} L_j$$
 , where:

- s is the number of segments
- L<sub>i</sub> is the self inductance of each segment

A user interface allows to enter the antenna parameters which will be used to compute the antenna coil inductance:

- The number of turns
- The number of segments
- w: the conductor width in millimeters
- s: the conductor spacing in millimeters
- the conductor thickness in micrometers)
- Length in millimeters
- Width in millimeters

The number of turns is incremented each time a segment is added to a complete turn.

Figure 19 shows the user interface corresponding to the DEMO-CR95HF-A antenna and Figure 20 the characteristics of the rectangular planar antenna etched on the DEMO-CR95HF-A PCB.

The resulting impedance,  $L_{ant}$ , is 423.07 nH instead of 430 nH, knowing that this value includes the parasitic capacitance. Without the parasitic capacitance, the measured value of  $L_{ant}$  is 420.2 nH.

Figure 19. User interface for planar rectangular coil inductance calculation

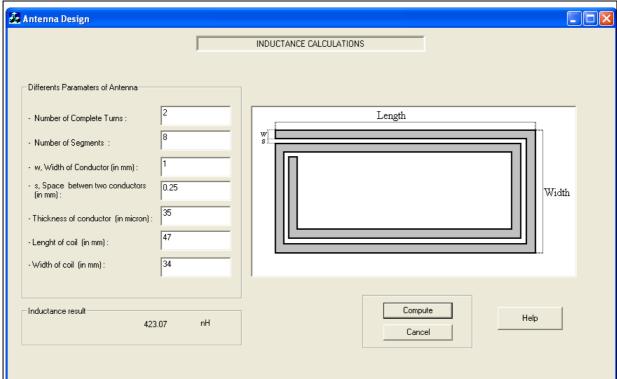



Figure 20. Rectangular planar antennas

Once the antenna coil inductance has been calculated, a prototype coil is realized. The value of the so-obtained prototype must then be validated by measurement. This can be done using either a contactless or a non-contactless method.

Conclusion AN3394

## 5 Conclusion

Figure 21. DEMO-CR95HF-A circuit

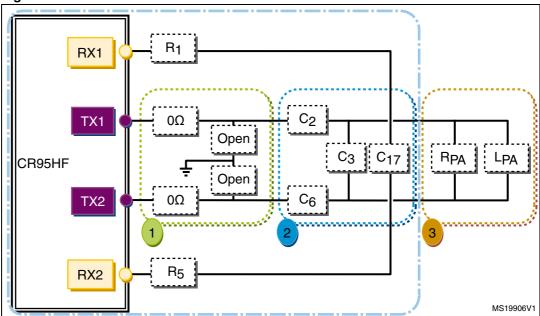

The following table summarizes the component values mounted on the DEMO-CR95HF-A demonstration board:

Table 2. DEMO-CR95HF-A component commended values


Component	Recommended value
C <sub>2</sub>	150 pF
C <sub>6</sub>	150 pF
C <sub>3</sub>	220 pF
C <sub>17</sub>	15 pF
R <sub>PA</sub>	2238 Ω
L <sub>PA</sub>	430 nH
R <sub>1</sub>	330 Ω
R <sub>5</sub>	330 Ω

## Appendix A Demonstration of C<sub>11</sub> and C<sub>22</sub> calculation

#### A.1 Equivalent circuit

Z<sub>tot</sub> defines the input impedance of the matching circuit and the equivalent parallel antenna.

Figure 22. Final equivalent circuit

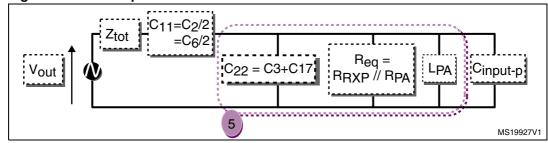

Calculation of R<sub>eq:</sub>

#### **Equation (A.I.1)**

$$R_{eq} = \frac{R_{RXP} \times R_{PA}}{R_{RXP} + R_{PA}}$$

Calculation of Z<sub>tot</sub>:

#### Equation (A.I.2)

$$Z_{tot} = \frac{1}{j \times C_{11} \times \omega} \times \frac{R_{eq} \times (1 - L_{PA} \times \omega^2 \times (C_{22} + C_{11})) + j \times \omega \times L_{PA}}{R_{eq} (1 - L_{PA} \times C_{22} \times \omega^2) + j \times \omega \times L_{PA}}$$

3. Resonance pulsation:

$$Z_{tot} = R_{tot} + j \times X_{tot}$$

To determine the resonance pulsation, the imaginary part of  $Z_{tot}$  must be cancelled. The conditions are:

$$R_{tot} = R_{out}$$
 and  $X_{tot} = 0$ 

#### Equation (A.I.3)

$$R_{tot} = \frac{-R_{eq} \times L_{PA} \times C_{11} \times \omega^{2} \times (1 - L_{PA} \times \omega^{2} (C_{22} + C_{11}) + \omega^{2} \times L_{PA} \times R_{eq} \times C_{11} \times (1 - L_{PA} \times \omega^{2} \times C_{22}))}{(R_{eq} \times C_{11} \times \omega)^{2} \times (1 - L_{PA} \times C_{22} \times \omega^{2})^{2} + (\omega^{2} \times L_{PA} \times C_{11})^{2}}$$

#### **Equation (A.I.4)**

$$X_{tot} = -\omega \times C_{11} \times \frac{{R_{eq}}^2 \times (1 - L_{PA} \times \omega^2 \times C_{22})(1 - L_{PA} \times \omega^2 \times (C_{22} + C_{11})) + \omega^2 \times {L_{PA}}^2}{{(R_{eq} \times C_{11} \times \omega)}^2 \times (1 - L_{PA} \times C_{22} \times \omega^2)^2 + {(\omega^2 \times L_{PA} \times C_{11})}^2}$$

Neglecting  $\omega^2$  x  $L_{PA}^{-2}$ , then resolving the numerator leads to two different resonance pulsation  $\omega_0$  and  $\omega_1$ :

#### Equation (A.I.5)

$$\omega_0 = \sqrt{\frac{1}{L_{PA} \times (C_{22} + C_{11})}}$$

#### Equation (A.I.6)

$$\omega_1 = \sqrt{\frac{1}{L_{PA} \times C_{22}}}$$

Finally inserting *Equation (A.I.5)* in *Equation (A.I.3)* leads to:

#### **Equation (A.I.7)**

$$C_{11} = \frac{1}{R_{eq} \times \omega_0} \times \sqrt{\left(\frac{R_{eq}}{R_{out}} - 1\right)}$$

#### Equation (A.I.8)

$$C_{22} = \frac{1}{L_{PA} \times \omega_0^2} - C_{11}$$


#### Equation (A.I.9)

$$C_{22} = \frac{1}{L_{PA} \times \omega_0^2} - C_{11} - C_{input-p}$$

In addition,  $C_{input-p}$  is in parallel with  $C_{22}$ , and  $C_{input-p}$  has to be subtracting to  $C_{22}$ .

## A.2 Serial to parallel equivalence RL impedance, and example of RL load

 Figure 23. Serial-to-parallel RL equivalent circuit



$$Z_{load} = Z_{loadP}$$

$$R_A + j \times \omega \times L_A = \frac{R_{PA} \times L_{PA} \times j \times \omega}{R_{PA} + L_{PA} \times j \times \omega}$$

#### **Equation (A.II.1)**

$$R_A + j \times \omega \times L_A = \frac{R_{PA} \times L_{PA}^2 \times \omega^2}{R_{PA}^2 + (L_{PA} \times \omega)^2} + j \times \frac{R_{PA}^2 \times L_{PA} \times \omega}{R_{PA}^2 + (L_{PA} \times \omega)^2}$$

Consider that:

#### **Equation (A.II.2)**

$$Q_{A} = \frac{\left|\Im(Z_{load})\right|}{\Re(Z_{load})} = \frac{\omega \times L_{A}}{R_{A}} = \frac{\Re(Z_{loadP})}{\left|\Im(Z_{loadP})\right|} = \frac{R_{PA}}{L_{PA} \times \omega}$$

Equation (A.II.2) in equation (A.II.1) leads to:

$$R_A + j \times \omega \times L_A = \frac{R_{PA}}{1 + Q_A^2} + j \times \frac{Q_A \times R_{PA}}{1 + Q_A^2}$$

Identify the real part and the imaginary parts:

#### **Equation (A.II.3)**

$$R_A = \frac{R_{PA}}{1 + Q_A^2}$$

#### **Equation (A.II.4)**

$$\omega \times L_A = \frac{Q_A \times R_{PA}}{1 + Q_\Delta^2}$$

From equation (A.II.3):

#### **Equation (A.II.5)**

$$R_{PA} = R_A \times (1 + Q_A^2)$$


By equation (A.II.4):

#### **Equation (A.II.6)**

$$L_{PA} = L_A \times \frac{(1 + Q_A^2)}{Q_A^2}$$

## A.3 Serial to parallel equivalence RC impedance, and example of RC load

 Figure 24. Serial-to-parallel RC equivalent circuit



$$Z_{RX} = Z_{RXP}$$

$$2 \times R_{RX} + \frac{1}{j \times \omega \times C_{input}} = \frac{R_{RXP}}{j \times \omega \times R_{RXP} \times C_{input-p} + 1}$$

So:

#### **Equation (A.III.1)**

$$2 \times R_{RX} - j \times \frac{1}{\omega \times C_{input}} = \frac{R_{RXP}}{1 + (R_{RXP} \times C_{input - p} \times \omega)^2} - j \times \frac{{R_{RXP}}^2 \times C_{input - p} \times \omega}{1 + (R_{RXP} \times C_{input - p} \times \omega)^2}$$

Consider that:

#### **Equation (A.III.2)**

$$Q_{RX} = \frac{\left|IM(Z_{RX})\right|}{RE(Z_{RX})} = \frac{1}{2 \times \omega \times C_{input} \times R_{RX}} = \omega \times C_{input-p} \times R_{RXP}$$

Equation (A.III.2) in equation (A.III.1) leads to:

$$2 \times R_{\mathsf{RX}} - j \times \frac{1}{\omega \times C_{\mathsf{input}}} = \frac{R_{\mathsf{RXP}}}{1 + Q_{\mathsf{PX}}^2} - j \times \frac{{Q_{\mathsf{RX}}}^2}{1 + {Q_{\mathsf{PX}}}^2} \times \frac{1}{C_{\mathsf{input} - p} \times \omega}$$

Identify the real and the imaginary parts:

**Equation (A.III.3)** 

$$2 \times R_{RX} = \frac{R_{RXP}}{1 + Q_{RX}^2}$$

**Equation (A.III.4)** 

$$\frac{1}{\omega \times C_{input}} = \frac{{Q_{RX}}^2}{1 + {Q_{RX}}^2} \times \frac{1}{C_{input - p} \times \omega}$$

By equation (A.III.3):

**Equation (A.III.5)** 

$$R_{RXP} = 2 \times R_{RX} \times (1 + Q_{RX}^2)$$

By equation (A.III.4):

**Equation (A.III.6)** 

$$C_{input-p} = C_{input} \times \frac{Q_{RX}^{2}}{1 + Q_{RX}^{2}}$$

Where

 $Q_{RX}$  = quality coefficient.

Revision history AN3394

## 6 Revision history

Table 3. Document revision history

Date	Revision	Changes
10-June-2011	1	Initial release.
12-Jul-2011	2	Updated DEMO-CR95HF-A antenna dimensions Section 1.3: Inductive antenna impedance.
25-Jul-2011	3	Corrected C <sub>22</sub> equivalent serial capacitance name in Section 1.5.2: Entire equivalent circuit
22-Aug-2011	4	Modified document title. Updated Introduction. Updated Section 2: Application to DEMO-CR95HF-A demonstration board overview to add the case of user-designed antenna. Added Section 4: Main criteria for key antenna design.
03-Oct-2011	5	Modified C <sub>3</sub> and C <sub>17</sub> in <i>Table 2: DEMO-CR95HF-A component commended values</i> .

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY TWO AUTHORIZED ST REPRESENTATIVES, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2011 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

