
Optimized RF board layout for STM32WL Series

Introduction

The STM32WL Series microcontrollers integrate RF transceiver for LPWAN (long-power wide-area network), compatible with LoRa[®], GFSK, DBPSK, and MSK, in the frequency range 150 to 960 MHz.

The STM32WL Series devices (named STM32WL later in this document) have two output powers:

- HP (high-power RFO_HP), optimized up to 22 dBm
- LP (low-power RFO_LP), optimized up to 15 dBm

The devices also include a differential RF input (RFI, up to 0 dBm) for the Rx low-noise amplifier (LNA).

To achieve the right performances for the RF output and RF input signals, some recommendations must be followed for the board design. Special care is required for the layout of an RF board compared to a conventional circuit.

This document describes precautions to be taken to achieve the best RF performance of the STM32WL on efficient applications, that last for long time under battery. The description is based on the UFBGA73 (5 x 5 mm) reference 4-layer board.

1 Main rules summary

Some general guidelines when routing an RF PCB are listed below:

- RF traces must be short and straightforward.
Make the transmission lines short and straightforward in order to avoid reflections, save power and reduce high-frequency issues.
- Place and route decoupling capacitors and RF components first.
The placement of the RF part at first, is highly recommended. Decoupling capacitors are essential to avoid high-frequency problems and maintain power integrity. Do not hesitate to add some other decoupling capacitors if needed.
- Place and route critical signals.
- Do not route high-frequency signals on board outline.
High-frequency signals on board outline tend to radiate due to edge effects of high-frequency fields.
- Try to maintain the characteristic impedance (50 Ω) constant.
Avoid discontinuities such as different sizes of pads put on transmission lines, bends, T-junctions, changing RF trace width along the line.
- Keep critical signals away from RF.
High-frequency signals can induce some undesired effects in critical signals such as electric and/or magnetic coupling.
- For high-frequency applications, 4-layer PCBs are better than 2-layer.
- Try to avoid vias with RF signals.
Vias in RF paths can cause reflections, radiation and consequently losses.
- RF return current paths must be free of obstacles or discontinuities.
- Avoid undesired magnetic coupling between inductors by leaving space between them, using magnetic shielding and/or placing them perpendicular to each other.
- Try to reduce undesired parasitic capacitances and inductances associated with the circuit layout as much as possible.
- For filter inductors such as SMPS chokes, use shielded inductors to minimizing noise and place them perpendicular to LNA traces and other RF traces.
- To reduce electromagnetic undesired emission, a metal shield can be added above RF components.

This application note applies to STM32WL Series microcontrollers based on the Arm[®] Cortex[®]-M processor.

Note: Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.



2 Characteristic and controlled impedance

All transmission lines below microwave frequencies have at least two conductors:

- In one conductor, the RF currents go towards the antenna.
- In the other, the RF currents come back to the RF source.

In order to feed an antenna, transmission lines on PCBs, designed considering their characteristic impedances, are used.

The characteristic impedance of a transmission line (sometimes represented by Z_C or Z_0) is defined as the constant ratio between the voltage and current waves along the line. Z_C can be defined with R, L, G and C parameters that represent the transmission line model of an extremely short segment, as shown in this formula:

$$Z_C = \sqrt{\frac{R + j\omega L}{G + j\omega C}} = \sqrt{\frac{Z_{series}}{Y_{shunt}}}$$

where:


- R = total series resistance, per unit length of two conductors, in ohms
- L = total series inductance, per unit length of two conductors, in henrys
- G = shunt conductance between two conductors per unit length, in siemens
- C = shunt capacitance per unit length between conductors, in farads
- j = imaginary number
- ω = angular frequency, in rad/s

The impedance formed by a PCB trace and its associated reference planes, constitute the characteristic impedance of the transmission line on the PCB. This characteristic impedance on PCBs is frequently called controlled impedance.

To make it simpler, the controlled impedance of a PCB is the physical dimensions that define the R, L, G and C parameters. Characteristics of the materials, like permeability or permittivity, impact the value of the controlled impedance. Since no magnetic materials are used in PCBs, the relative permeability is considered equal to one ($\mu_r = 1$).

In the example of a coplanar single-ended waveguide line with lower-ground plane (GCPW for grounded coplanar waveguide), the physical dimensions like t (thickness), w (width), c (clearance), h (height) and permittivity constants of dielectric materials, determinate the characteristic impedance of the transmission line on the PCB.

Figure 1. Example of a GCPW in a 2-layer PCB

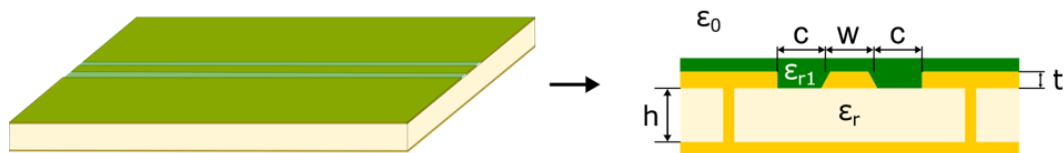


Transmission lines on PCBs can also be made in other formats like microstrip or strip lines.

GCPW is often selected up to a few GHz in order to reduce radiation due to fringe fields, therefore causing less EM (electromagnetic) radiation thus less interference. For STM32WL reference boards, GCPW are used as standard transmission line structures.

GCPW is more sensitive to PCB manufacturing variations than microstrip lines. GCPW physical dimensions (such as t, w, c, and h) must be kept within low tolerances in order to maintain an impedance very close to 50 Ω.


In order to understand how the manufacturing process can impact the characteristic impedance of a GCPW transmission line on a PCB, consider the example of a 4-layer PCB with physical dimensions varying with 20 % tolerance, around a 50 Ω characteristic impedance at 1 GHz. In that case, the stack-up with nominal values is shown in the figure below.

Figure 2. Example of a transmission line type GCPW on PCB

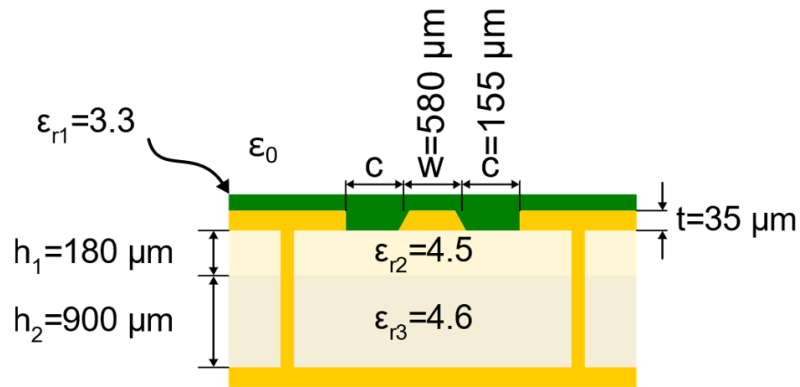

The entire PCB stack-up for this example is depicted in the figure below.

Figure 3. Stack-up example for 4-layer PCB

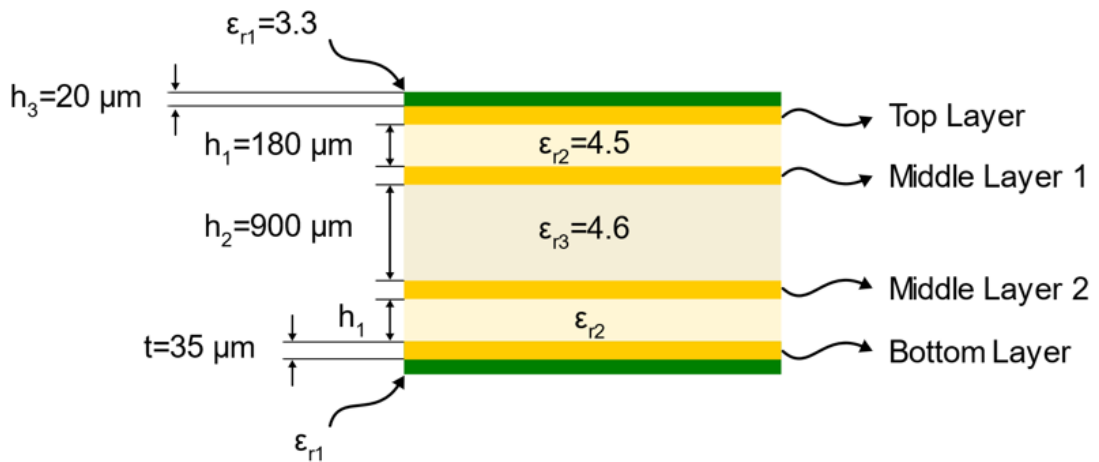

Note: Due to mechanical constraints, PCBs are often made with symmetrical stack-ups.

As the transmission width varies during the manufacturing process within a 20 % tolerance, the expected result is shown in the figures below.

Figure 4. Characteristic impedance versus width variation


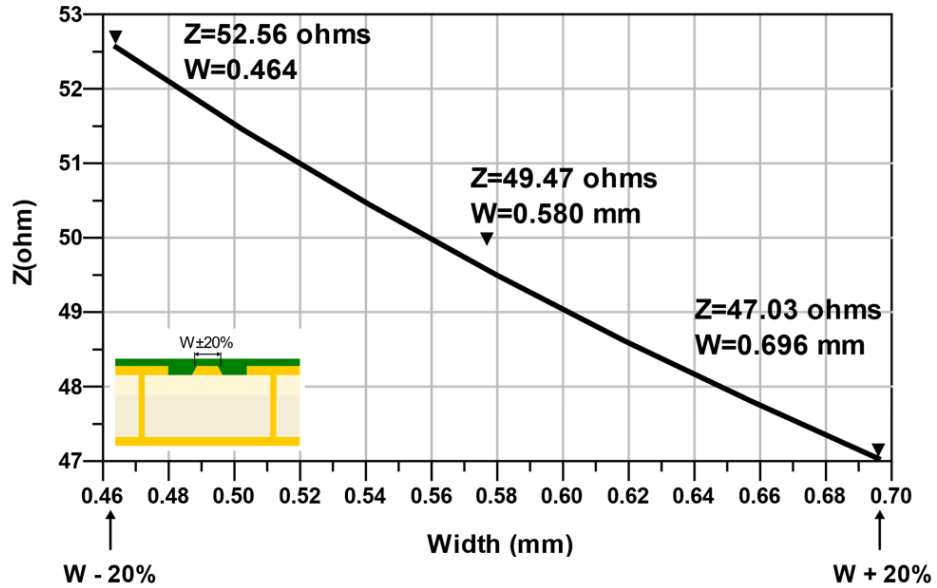


Figure 5. Characteristic impedance versus clearance variation

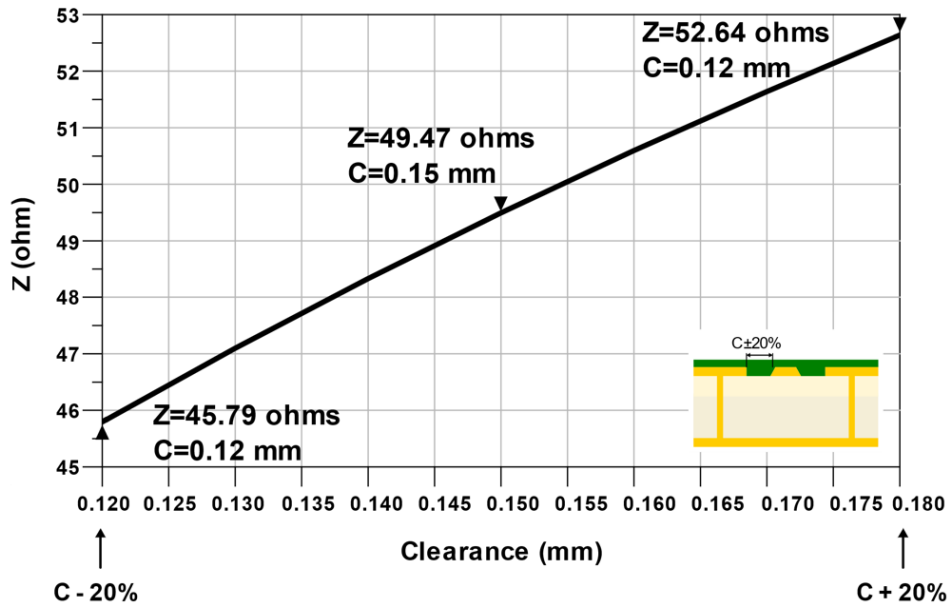

The goal is to design, in theory, transmission lines that can delivery to the antenna 100 % of the power inserted at the beginning of the line. To better understand the impact of the mismatch due to a characteristic impedance other than 50 Ω , see the table below.


Table 1. Characteristic impedance and impact on RF measures (load impedance = 50 Ω)

Characteristic impedance (Ω)	Reflection coefficient	Return loss (dB)	Mismatch loss (dB)	VSWR ⁽¹⁾	Reflected power (%)	Transmitted power (%)
55	-0.048	0.010	26.444	1.100	0.23	99.77
54	-0.038	0.006	28.299	1.080	0.15	99.85
53	-0.029	0.004	30.714	1.060	0.08	99.92
52	-0.020	0.002	34.151	1.040	0.04	99.96
51	-0.010	0.000	40.086	1.020	0.01	99.99
50	0.000	0.000	-	1.000	0.00	100.00
49	0.010	0.000	39.913	1.020	0.01	99.99
48	0.020	0.002	33.804	1.042	0.04	99.96
47	0.031	0.004	30.193	1.064	0.10	99.90
46	0.042	0.008	27.604	1.087	0.17	99.83
45	0.053	0.012	25.575	1.111	0.28	99.72

1. Voltage standing wave ratio.

As a good practice, always identify the controlled impedances in schematics as depicted in the figure below.

Figure 6. Example of schematic with controlled impedance identified

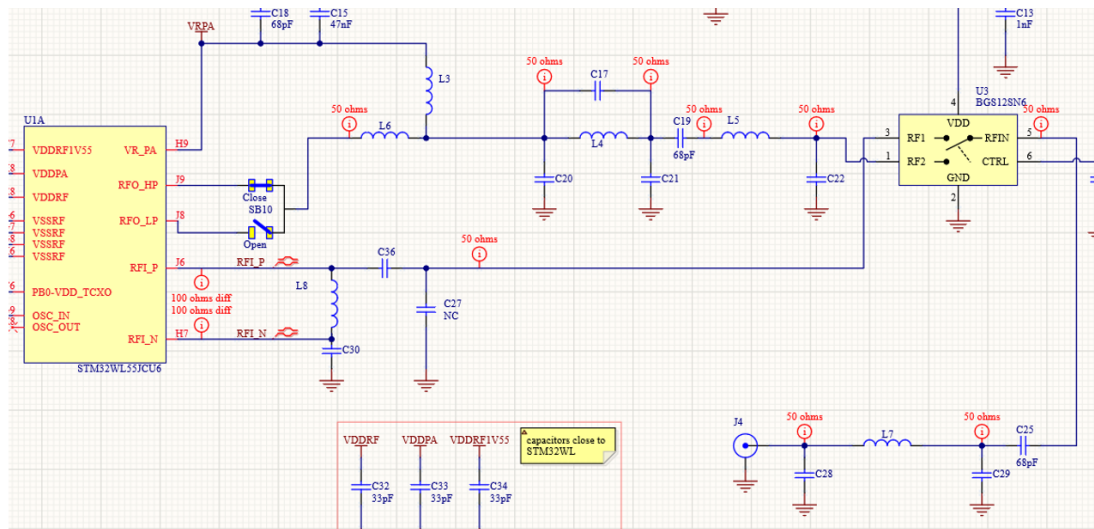

3 RF transmission line


The geometry of a transmission line is defined to minimize the tendency of the line to act as an antenna and to radiate on its own, while the geometry of an antenna is selected to maximize its tendency to radiate.

As mentioned before, the RF transmission line on PCB is defined by its geometry and the PCB stack-up. This section includes a PCB stack-up description and some stack-ups to be copied in order to have the right impedances for the Tx and Rx paths.

3.1 Stack-up board

A typical 4-layer PCB with three types of vias is described in the figure below. The trace width, the distance between trace and ground reference, and the material characteristics determine the impedance of the RF trace. Microvias are often used with BGA packages due to the high-density interconnections (HDI).

Figure 7. Typical 4-layer PCB stack-up with three different types of vias

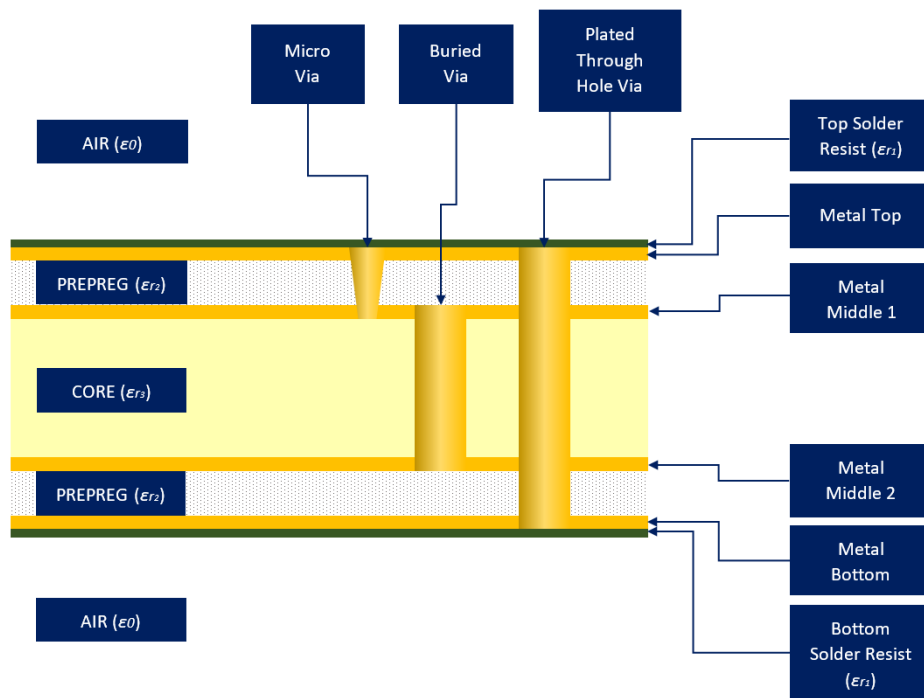

3.2 Stack-ups for Tx 50 Ω and Rx 100 Ω

One of the most difficult tasks is to correctly determine the width and clearance for an RF track from a given stack-up. The difficulty is linked to the effective dielectric constant (ϵ_{r_eff}) calculation for a given substrate.

A 2.5/3D field-solver software is often used to determine ϵ_{r_eff} . PCB manufacturers can assist greatly in this task. Whenever possible, ask to the PCB manufacturer, the design rules (dimensions) to use on the RF lines to obtain 50 Ω single-ended and 100 Ω differential. Otherwise, copy/paste a predefined board stack-up with its characteristics and use the recommended design rules to obtain the desired impedances.

[Appendix A Stack-up examples](#) details some stack-up boards to obtain 50 Ω for Tx lines and 100 Ω for Rx lines that can be copied to the application. Contact the PCB manufacturer to verify if the values on the stack-up selected can be guaranteed.

3.3 Metal cutout for impedance control

For some PCB stack-up layers where prepreg are very close to external layers, it is important to reference 50 Ω lines in internal layers other than middle layer 1. In such cases, in order to maintain the 50 Ω , a metal cutout must be created in internal layers to allow RF fields to get access to the internal reference plane for which the 50 Ω impedance has been defined.

Figure 8. 50 Ω transmission lines in various layers


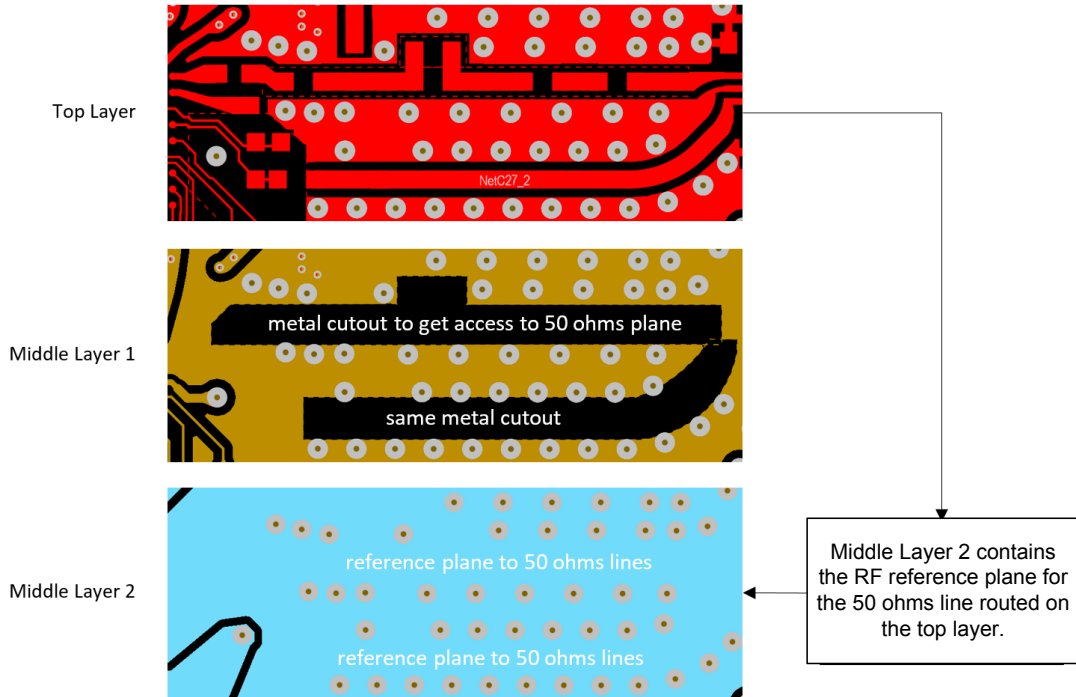


Figure 9. Width of metal cutout in middle layer 1 equal to the width of transmission plus clearance

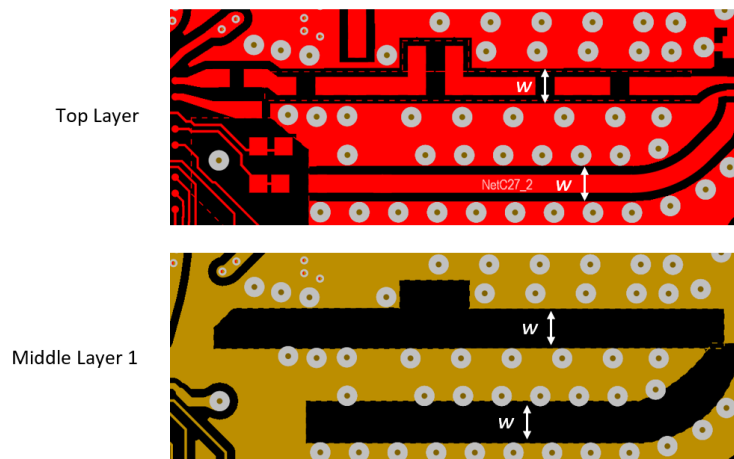

Four cases exist for the cutout in internal layers. The figures below give simulation results using a known electromagnetic field solver, shown with reflection coefficients (S11) in the Smith chart, considering four w cases for the cutout in internal layers (shown in Figure 9).

Figure 10. Example 1: internal cutout equal to w (width)

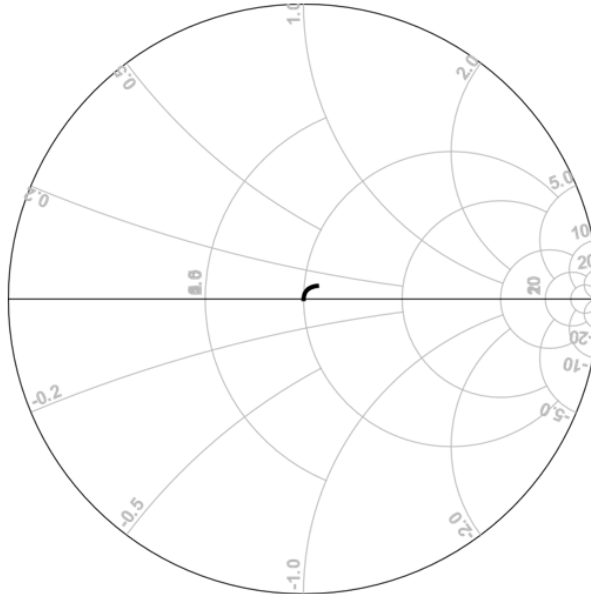


Figure 11. Example 2: internal cutout greater than w

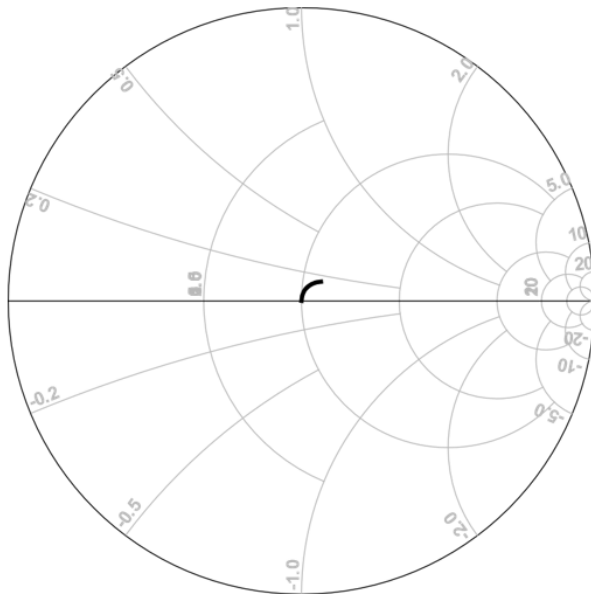


Figure 12. Example 3: internal cutout smaller than w


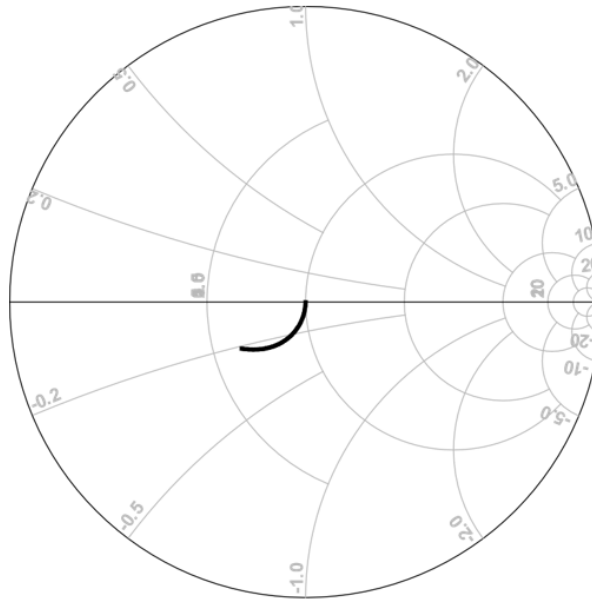


Figure 13. Example 4: internal cutout much smaller than w

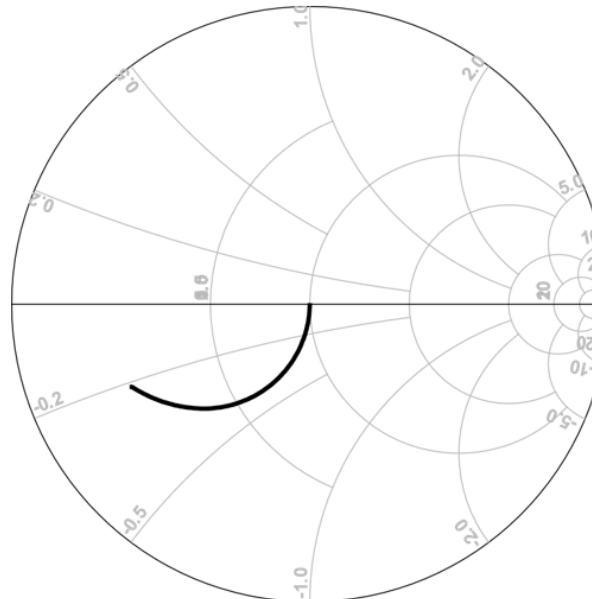

From these simulation results, the best cutout is the first one, with the cutout width equal to the RF line, plus clearance on top layer, as shown in Figure 9.

4 Surface mounted components with RF signals

4.1 Capacitors

The table below gives some recommendations regarding the routing of SMD (surface mounted components).

Table 2. Capacitor pads with RF signals






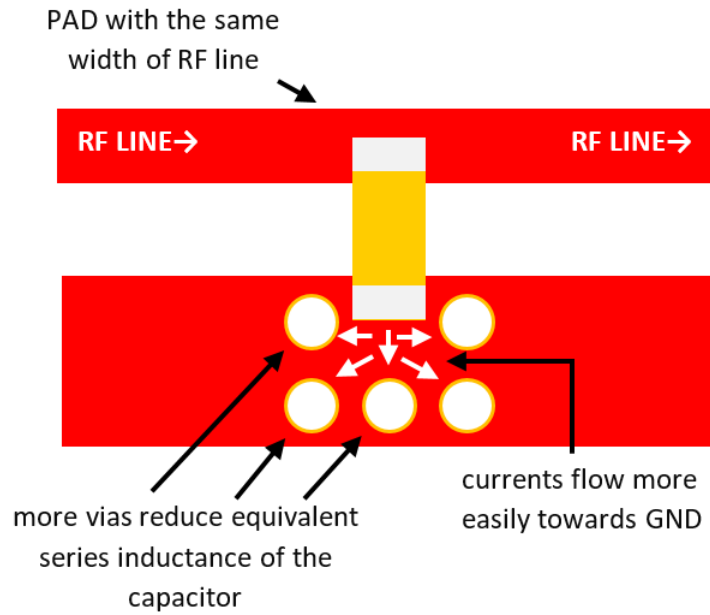
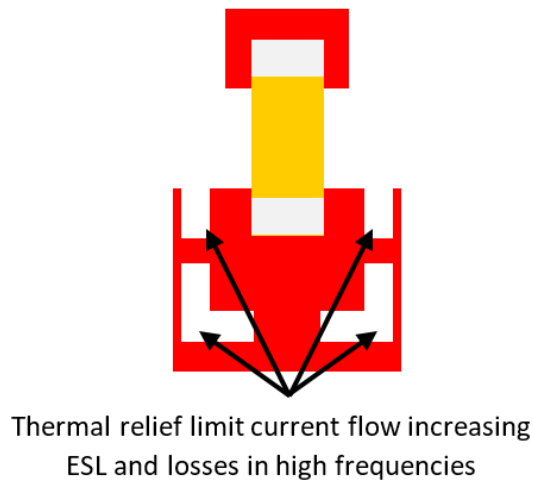
Performance	Capacitor pad type	Comment
Recommended		Short traces with multiples vias reducing return current impedance
Better		Short traces
Better		
Poor		Long traces between capacitor increasing series inductance
Not good		Thinner access track increasing the equivalent series inductance of the capacitor

Figure 14. Example of capacitors on RF lines



Whenever possible, thermal reliefs must be avoided on RF lines as they increase the equivalent series inductance (ESL) of capacitors and then change the frequency response of the capacitors in addition to increasing losses.



Figure 15. Thermal reliefs



4.2 Inductors

The table below gives some recommendations regarding the inductors.


Table 3. Inductor pads with RF signals

Performance	Inductor pad type	Comment
Recommended		Short and same PAD width access traces, maintaining the original value of the inductance and Q-Factor
Not good		Be careful with this kind of tricks. This narrow trace contributes to increase the inductance, but this can decrease the equivalent Q-factor of the inductor. RF inductors are carefully made to have a high Q-factor. Do not ruin it.

5 Via stitching and shielding

The recommendation is to put some vias around RF lines as shown in the figure below, in order to reduce high-frequency issues.

Figure 16. Spacing between vias around GCPW

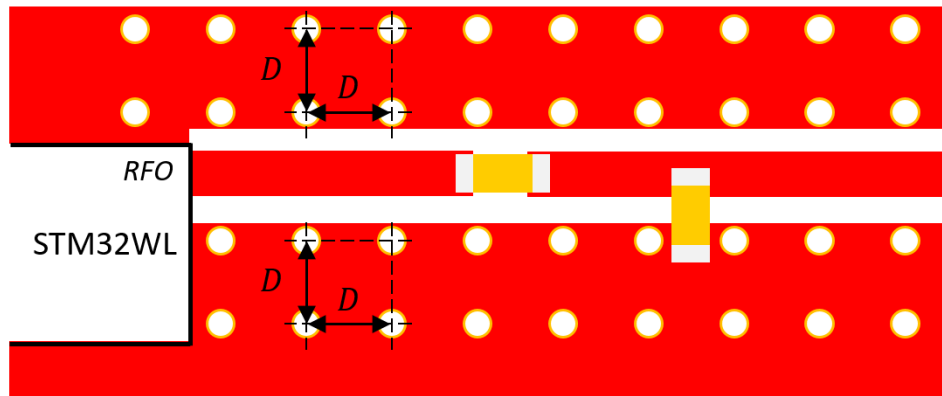

The following formula is used to determine the D value:

$$\frac{\lambda_G}{20} \leq D \leq \frac{\lambda_G}{10}$$

with λ_G , as guided wavelength, defined by this formula:

$$\lambda_G = \frac{3 \cdot 10^8}{f \cdot \sqrt{\epsilon_{r_eff}}}$$

where:

- f = highest frequency of the RF circuit operation
- ϵ_{r_eff} = effective dielectric constant of the PCB

6 RF return current path

The RF currents that go to the antenna must come back to their source inside the chip to complete a closed loop: it is done by a return path. Thus, a return path for the delivery medium back to the energy source must be provided. A return path is defined as the conductive path taken by the current returning to the source from the load, generally this return path is done on a grounded plane.

Table 4. Return paths



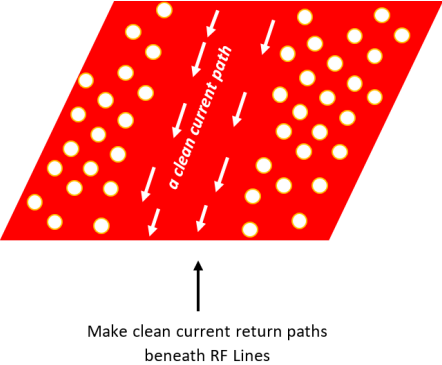
Performance	Return path type	Comment
Recommended	 <p>Make clean current return paths beneath RF Lines</p>	No vias in RF return path
Not good	 <p>It is a puzzle for currents that search their return paths</p>	Vias creating larger RF return path increasing losses and discontinuities

Figure 17. Clean return path example for RF currents

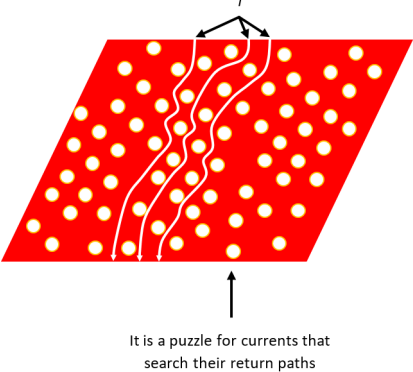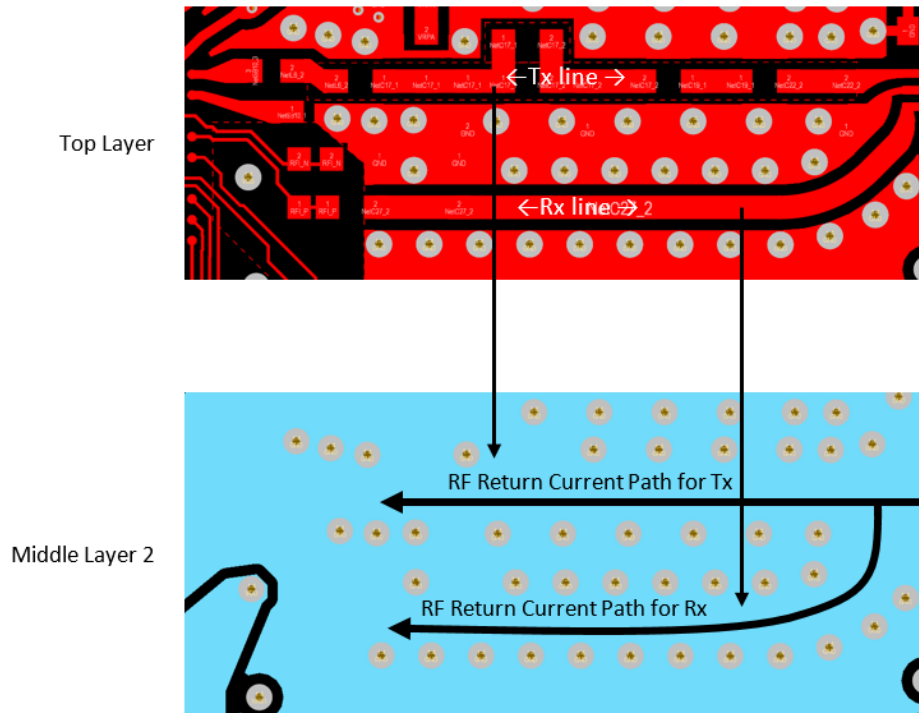

7 Discontinuities to avoid in transmission lines

When designing transmission line on PCB with a controlled impedance (50Ω), the objective is to maintain the same impedance in the whole system in order to transfer as much as energy as possible to the antenna and to minimize the unintentional loss of energy in the transmission line.

Table 5. Layout discontinuities

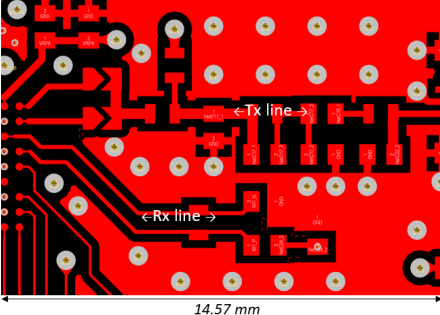
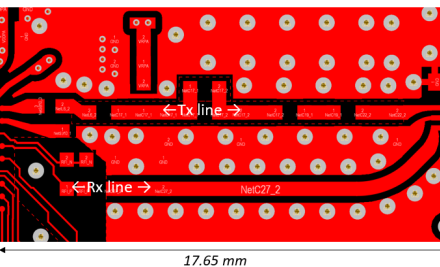
Performance	Layout	Comment
<p>Poor</p>		<p>Difference between component pad widths and RF line widths, thermal reliefs and components placed in a way creating parasitic effects</p>
<p>Taking the above routing and increase slightly layout dimensions allow the user to route the RF lines without discontinuities as shown below.</p>		
<p>Recommended</p>		<p>Clean RF lines with pad components at the same width as the RF lines and pad components on the RF lines</p>

Table 6. Track transitions

Performance	Transition type	Comment
Recommended		Smooth transition
Poor		Multi-step transition
Not good		Single-step transition

Table 7. Test points

Performance	Test point type	Comment
Recommended	<p>Test point inside the RF line (avoiding stubs)</p>	Test point with no stub
Not good	<p>Test point acting as a stub</p>	Test point as stub

Whenever possible, align the width between the RF lines and pads (no transition needed). Do not hesitate to reduce pad components to maintain constant width of RF traces.




Table 8. Pad component width

Performance	Pad component type	Comment
Recommended	Same width for RF line and pads 	No transition needed
Better	Tapered transition 	Smooth transition
Not good	Abrupt transition Pad components with different width 	Single-step transition

Table 9. RF switch transitions

Performance	RF switch transition type	Comment
Recommended		Smooth transition
Better		Tapered transition
Not good		Single-step transition

Table 10. Package pad to RF line transitions

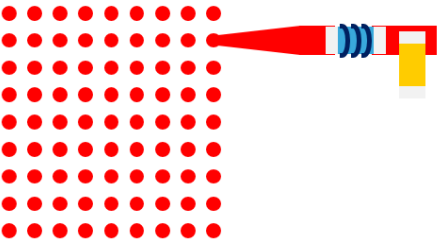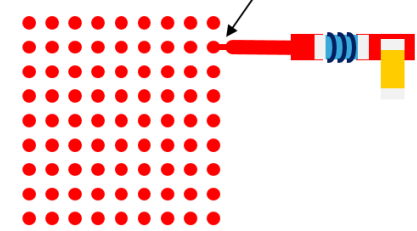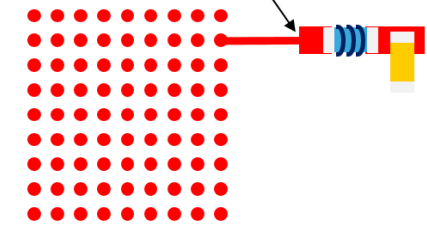
Performance	Pad to RF line transition type	Comment
Recommended		Smooth transition with polygons
Not good	Thin traces causing losses in high frequencies 	Thin trace with single-step transition
	Single-step transition 	Single-step transition

8 Bends with RF lines

A bend is needed when there is a direction change for an RF line. Bends with RF lines can cause reflections and power loss. Some guidelines are detailed in this section to avoid issues with bends in high-frequency transmission lines. The main idea when designing bends is to keep the same trace width in the corner.

Consider the worst case that is the 90° bend shown in the figure below.

Figure 18. 90° bend example

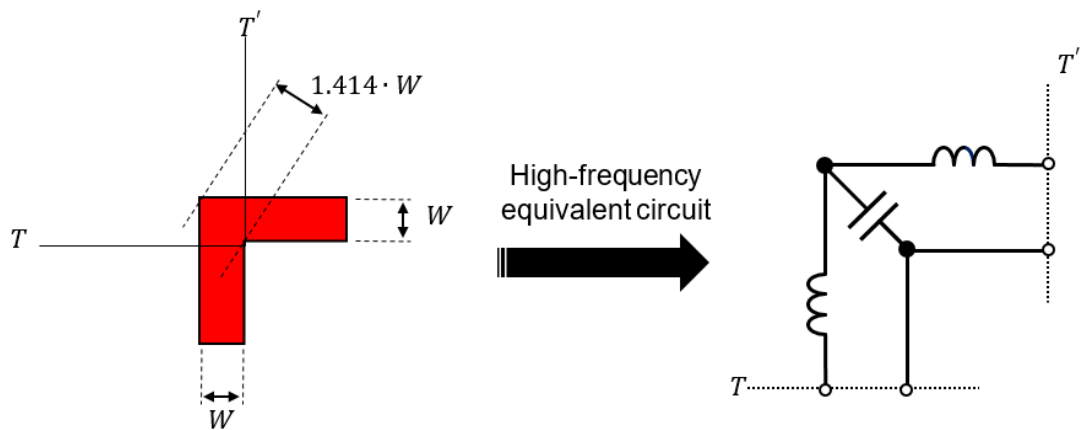





The ideal case is a straight line with a constant width as shown below.

Figure 19. Ideal case: straight line

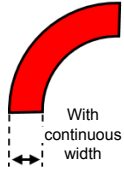

Table 11. Guidelines for bends in RF lines

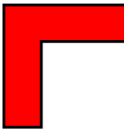
Performance	Bend type
Recommended	
Better	
Better	
Not good	

9 Minimize unintentional radiation

9.1 RFO harmonics

The typical RFO application circuit for the STM32WL is shown in the figure below.

Figure 20. Typical circuit for RFO harmonics

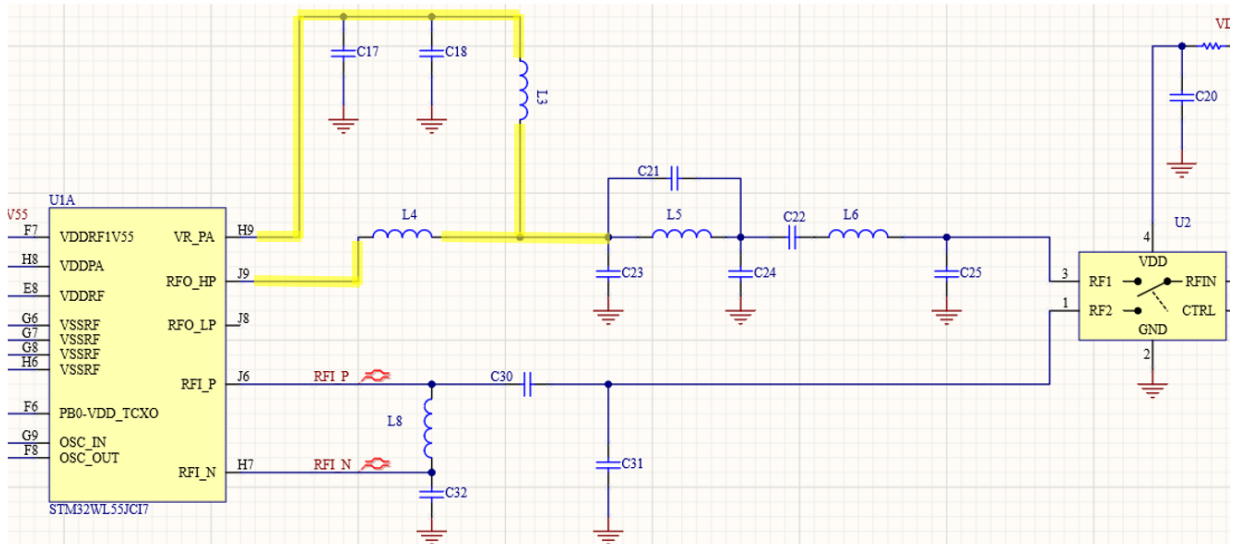

The STM32WL features a linear, high-efficiency RF PA (power amplifier) connected to the RFO pin (PA output). Due to the high-frequency harmonic components generated at RFO (above GHz for an operating frequency starting at 500 MHz), the RF tracks before filtering stages (before L5, C21, C24, C22, L6 and C25 in the schematic) may radiate unintentional electromagnetic (EM) energy. Any piece of metal that makes $\lambda/4$ under certain conditions, can act as an antenna radiating EM energy.

Note: Remember that the power radiated by a linear antenna of length L , is proportional to $P = (L/\lambda)^2$. This means that the bigger the unintentional antenna is, the greater the amount of energy it radiates.

The following formula can be used to determine the longest length of a track to not radiate EM energy on a PCB:

$$L < \frac{3 \cdot 10^8}{4 \cdot h \cdot f \cdot \sqrt{\epsilon_{r_eff}}}$$

where:

- h is the harmonic for which the user must determine the maximum track length to avoid.
- f is the operating frequency of the RF signal.
- ϵ_{r_eff} is the effective dielectric constant of the PCB stack-up layers.

Example

For an operating frequency at 915 MHz, the ninth harmonic (h_9) is equal to 8.235 GHz (9×915 MHz). For PCB with an $\epsilon_{r_eff} = 3$, the maximum track length is:


$$L < \frac{3 \cdot 10^8}{4 \cdot 9 \cdot 915 \cdot 10^6 \cdot \sqrt{3}} = 5.258 \text{ mm}$$

The maximum track length to avoid an unintentional harmonic radiation with an operating frequency at 915 MHz and taking the ninth harmonic, is 5.258 mm.

9.2 High-frequency signals on board outline


Routing high-frequency signals at board outline may cause unintentional EM radiation.

Figure 21. EM radiation generated by HF signals

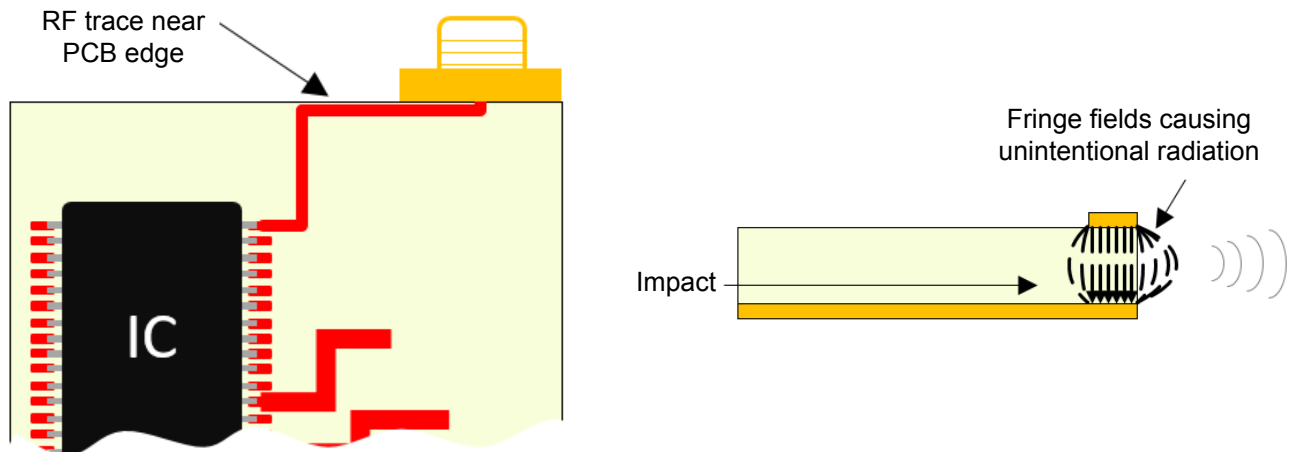

One solution to mitigate the problem of tracks that radiate EM is to place them between grounded planes (below and above).


Figure 22. How to mitigate unintentional EM radiation

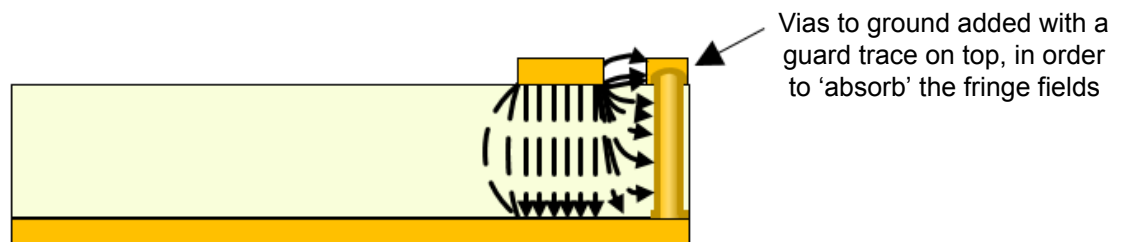

9.3 Ground flooding

Flooding unused PCB areas with GND and with multiple vias, can be used to keep the GND impedance low and reduce EMC issues.


Figure 23. PCB example with or without ground flooding

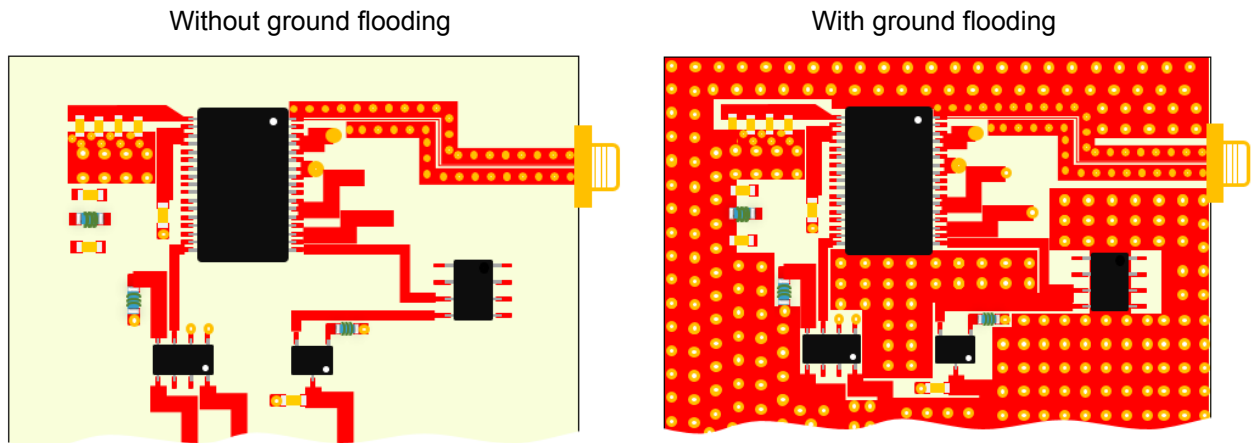

9.4 Metal shield

To prevent issues due to unintentional radiation of harmonic contents, it is highly recommended to put a metal shield to cover the RF part on the board.


Figure 24. PCB example with or without metal shield

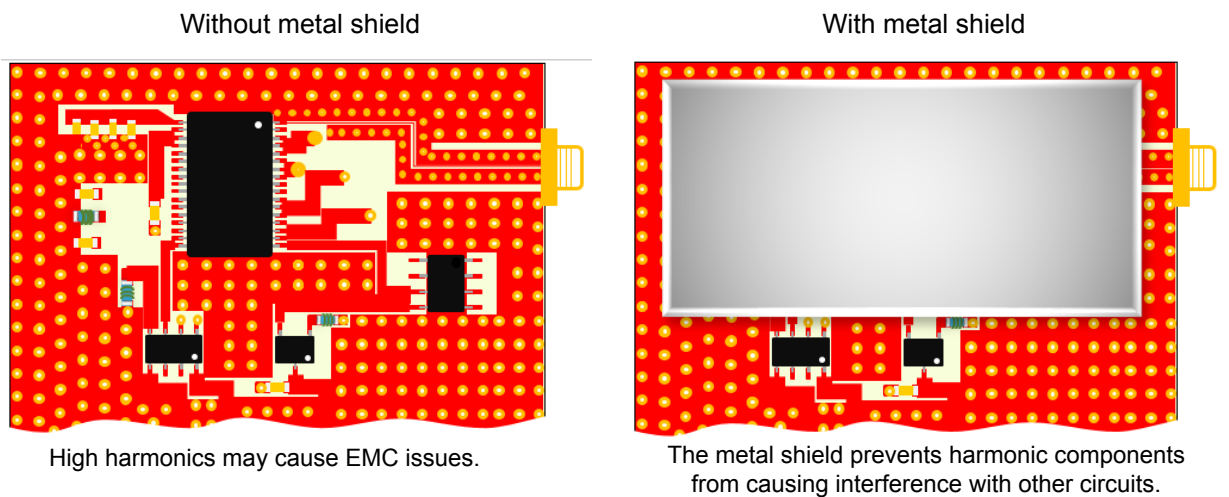

9.5 Power planes

To prevent unintentional EM radiation between GND planes and power planes, the power planes must not be routed at the edge of the board. Otherwise these power planes may radiate unintentional EM due to fringe fields. GND planes must be put in all layers around the board and must be connected together.


Figure 25. GND and power planes

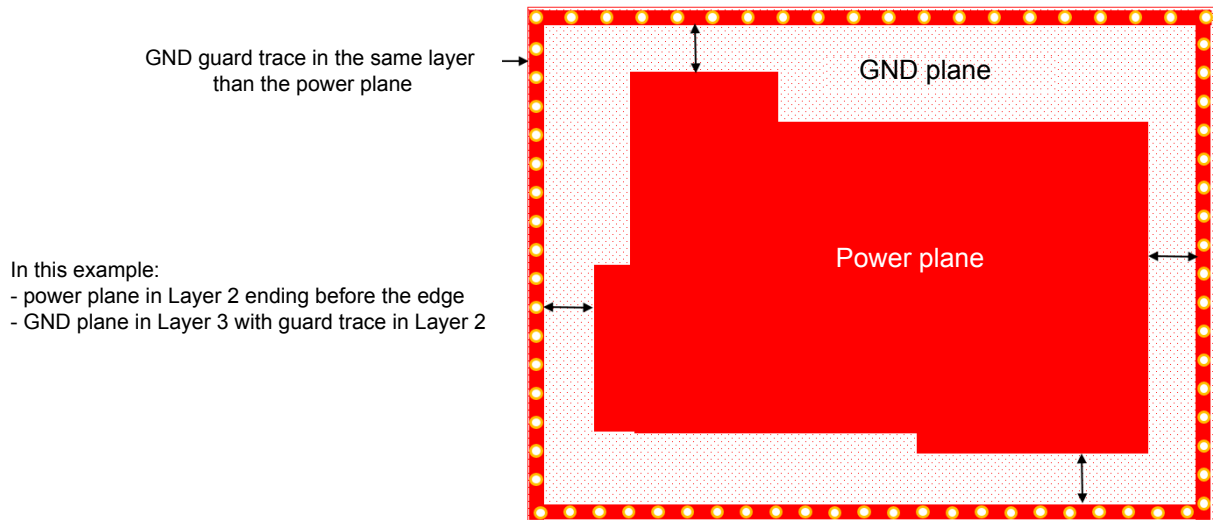

10 Decoupling capacitors

Capacitors with lower values must be placed closer to the chip than higher-value ones, as shown in the figure below.

Figure 26. Decoupling capacitors

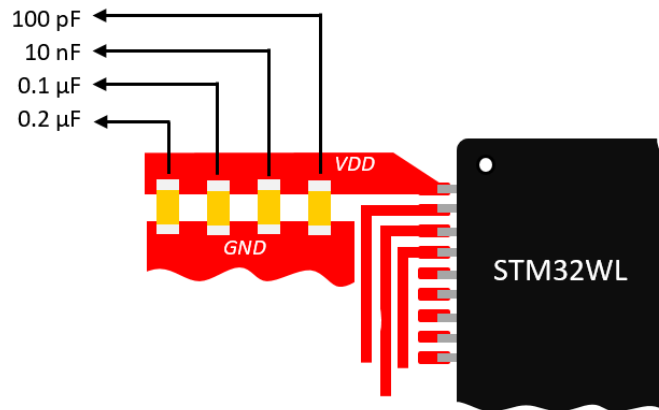


When routing decoupling capacitors, the smallest possible current loop must be maintained. Large current loops are translated into inductive behavior.

Table 12. Return currents for decoupling capacitors

Performance	RF switch transition type	Comment
Recommended		Reduced current loop
Poor		Large current loop

The equivalent series inductance (ESL, see the figure below) of a capacitor is impacted by the current loop.

Figure 27. High-frequency equivalent model of a capacitor



11 STM32WL reference layout

The reference PCB 4-layer layout for BGA package is detailed in the figures below.

Figure 28. All layers of STM32WL reference layout for BGA

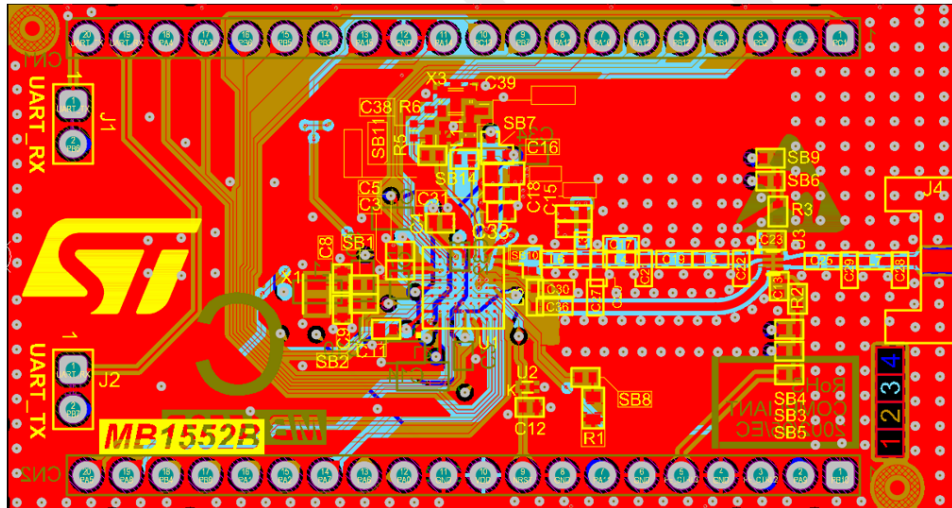


Figure 29. Top layer of STM32WL reference layout for BGA

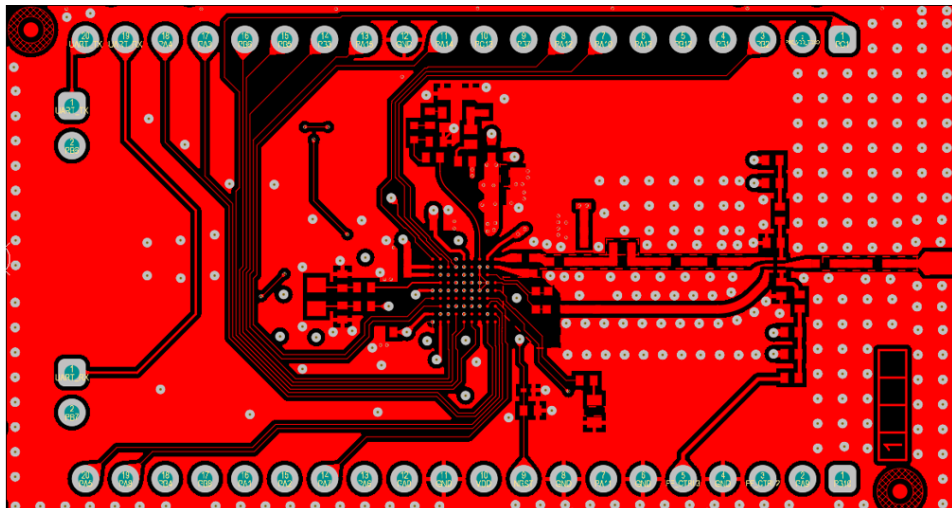


Figure 30. Middle layer 1 of STM32WL reference layout for BGA

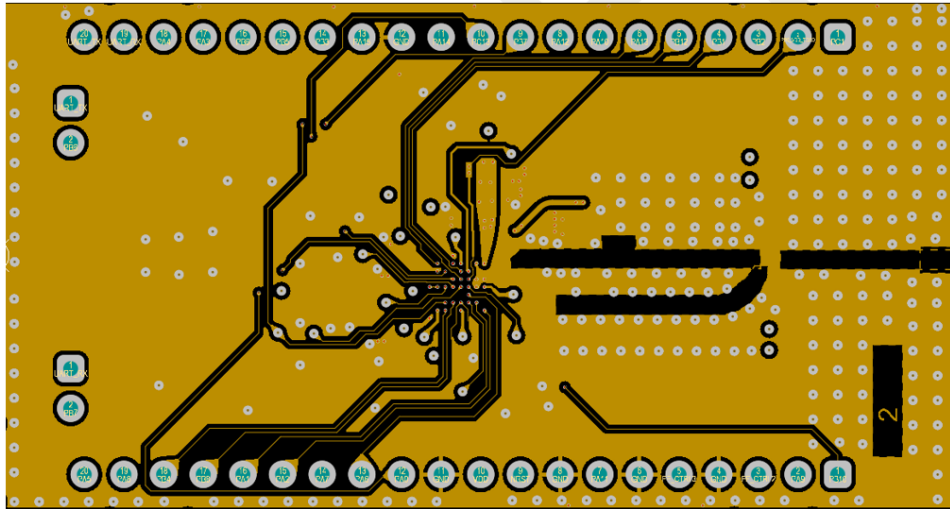


Figure 31. Middle layer 2 of STM32WL reference layout for BGA


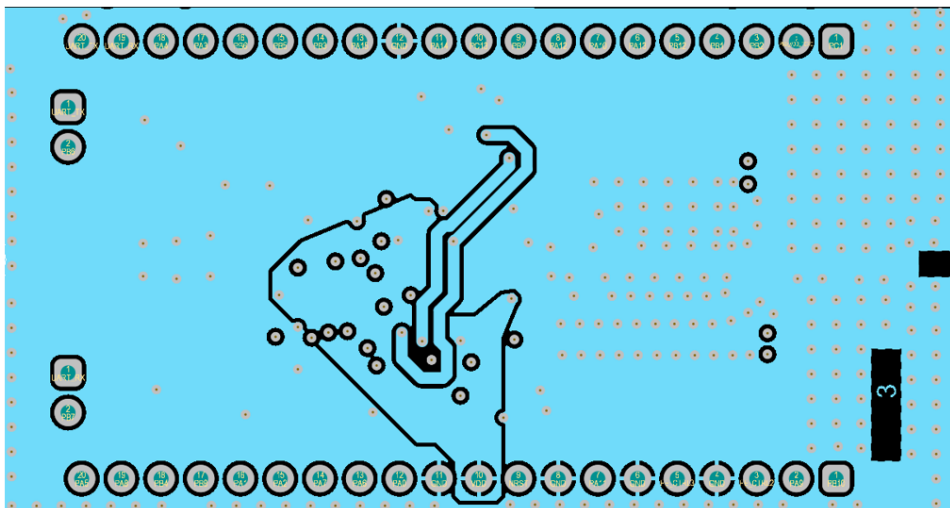


Figure 32. Bottom layer of STM32WL reference layout for BGA

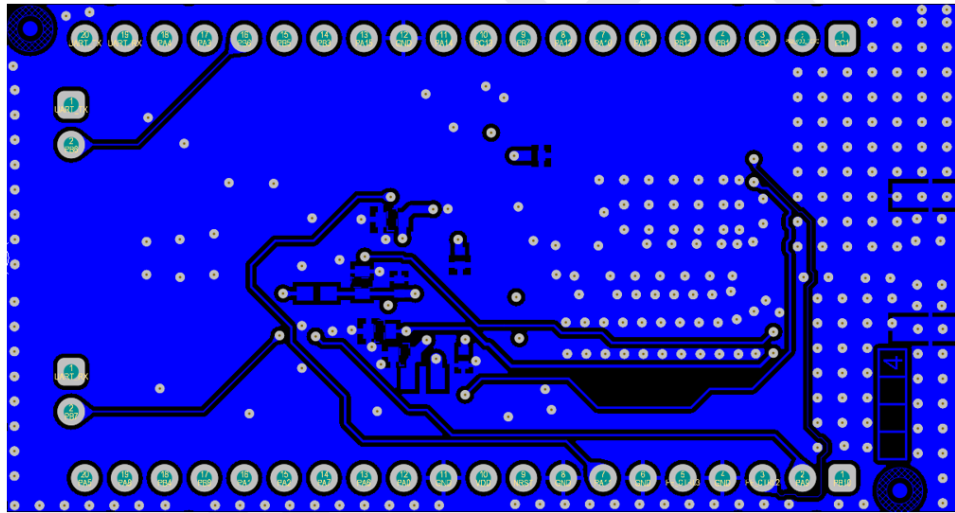

12 Documentation references

- Carr, Joseph J., and George Hippisley. Practical antenna handbook. New York, NY: McGraw-Hill/TAB Electronics, 2012. Print.
- Thierauf, Stephen C. High-speed circuit board signal integrity. Norwood, MA: Artech House, 2017.
- Hart, Bryan. Digital Signal Transmission: Line Circuit Technology. Boston, MA: Springer US, 1987.
- Parise, Brendon. A Practical Guide to RF and Mixed Technology Printed Circuit Board. Pleasanton, CA (USA). Optimum Design Associates, 2017, pp. 181-182.
- Li, Richard C. RF circuit design. Hoboken, New Jersey: John Wiley & Sons, Inc, 2012, pp. 328.
- Thierauf, Stephen C. High-speed circuit board signal integrity. Boston: Artech House, 2004.
- R.N. Simons: Coplanar Waveguide Circuits, Components, and Systems, Wiley-IEEE Press, 2001.
- Li Zhi, Wang Qiang and Shi Changsheng, "Application of guard traces with vias in the RF PCB layout," 2002 3rd International Symposium on Electromagnetic Compatibility, Beijing, China, 2002, pp. 771-774.
- Montrose, Mark I. Printed circuit board design techniques for EMC compliance: a handbook for designers. New York: IEEE Press, 2000.
- A. A. Oliner, "Equivalent Circuits for Discontinuities in Balanced Strip Transmission Line," in IRE Transactions on Microwave Theory and Techniques, vol. 3, no. 2, pp. 134-143, March 1955.
- R. Mehran, "Calculation of Microstrip Bends and Y-Junctions with Arbitrary Angle," in IEEE Transactions on Microwave Theory and Techniques, vol. 26, no. 6, pp. 400-405, Jun. 1978.
- I. Wolff, G. Kompa and R. Mehran, "Calculation method for microstrip discontinuities and T junctions," in Electronics Letters, vol. 8, no. 7, pp. 177-179, 6 April 1972.
- R. J. P. Douville and D. S. James, "Experimental study of symmetric microstrip bends and their compensation," IEEE Trans. Microwave Theory Tech., vol. MTT-26. pp. 175-182, Mar. 1978.
- R. Horton, "The Electrical Characterization of a Right-Angled Bend in Microstrip Line (Short Papers)," in IEEE Transactions on Microwave Theory and Techniques, vol. 21, no. 6, pp. 427-429, Jun. 1973.
- B. Easter, A. Gopinath and I. M. Stephenson, "Theoretical and experimental methods for evaluating discontinuities in microstrip," in Radio and Electronic Engineer, vol. 48, no. 1.2, pp. 73-84, January-February 1978.
- Shinichi Ikami and Akihisa Sakurai, "Practical analysis on 20H rule for PCB," 2008 Asia-Pacific Symposium on Electromagnetic Compatibility and 19th International Zurich Symposium on Electromagnetic Compatibility, Singapore, 2008, pp. 180-183.
- Xiaoning Ye et al., "EMI mitigation with multilayer power-bus stacks and via stitching of reference planes," in IEEE Transactions on Electromagnetic Compatibility, vol. 43, no. 4, pp. 538-548, Nov. 2001.
- M. I. Montrose, "Radiated emission far-field propagation with multiple ground stitch locations within a printed circuit board," 2010 Asia-Pacific International Symposium on Electromagnetic Compatibility, Beijing, 2010, pp. 297-300.
- A. Jaze, B. Archambeault and S. Connor, "EMI noise reduction between planes due to a signal via with a ground via at various distances," 2011 IEEE International Symposium on Electromagnetic Compatibility, Long Beach, CA, USA, 2011, pp. 167-172.
- C. L. Holloway and E. F. Kuester, "Closed-form expressions for the current density on the ground plane of a microstrip line, with application to ground plane loss," in IEEE Transactions on Microwave Theory and Techniques, vol. 43, no. 5, pp. 1204-1207, May 1995.
- Jun So Pak, Hyungsoo Kim, Joungho Kim and Heejae Lee, "PCB power/ground plane edge radiation excited by high-frequency clock," 2004 International Symposium on Electromagnetic Compatibility (IEEE Cat. No.04CH37559), Silicon Valley, CA, USA, 2004, pp. 197-202 vol.1.
- F. Gisin and Z. Pantic-Tanner, "Radiation from printed circuit board edge structures," 2001 IEEE EMC International Symposium. Symposium Record. International Symposium on Electromagnetic Compatibility (Cat. No.01CH37161), Montreal, Que., Canada, 2001, pp. 881-883 vol.2.
- Joungho Kim, Junso Pak, Jongbae Park and Hyungsoo Kim, "Noise generation, coupling, isolation, and EM radiation in high-speed package and PCB," 2005 IEEE International Symposium on Circuits and Systems, Kobe, 2005, pp. 5766-5769 Vol. 6.

- Mariscotti, Andrea. RF and Microwave Measurements: Device Characterization, Signal Integrity and Spectrum Analysis. Chiasso (Switzerland: ASTM Analysis, Simulation, Test and Measurement Sagl, 2015, pp. 299-392. Print.
- Advanced Design System 2020, Keysight Technologies.

13 Conclusion


Some care must be taken when designing an RF board. Guidelines for decoupling capacitors, RF general rules, reduction of EMC issues, controlled impedances with predefined PCB stack-up layers are presented in this application note. The user must adapt these guidelines to the application.

Those guidelines must be followed to secure a correct behavior of the application, with high performance for the RF part of the STM32WL board.

Appendix A Stack-up examples

Some stack-up examples to obtain 50 Ω for Tx lines and 100 Ω for Rx lines from a typical stack-up for BGA package as shown in the figure below.

Figure 33. Typical stack-up for BGA package

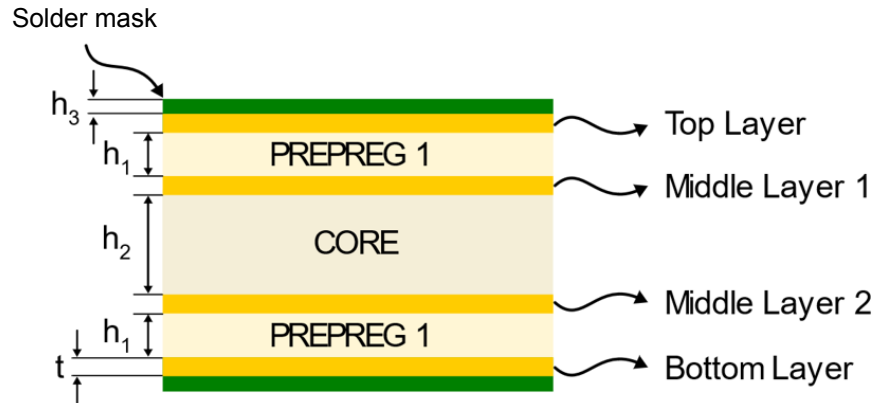

- **Case 1:** typical stack-up for BGA package with **PCB total thickness = 1.04 mm**
Consider configuration detailed in the table below.

Table 13. Case 1: PCB total thickness = 1.04 mm

Dielectric materials				Metal layers	
Element	Material	Nominal thickness h_x (μm)	ϵ_r	Layer	Nominal thickness t (μm)
Solder mask (h_3)	Solder resist	20	3.7	Top	35
Prepreg 1 (h_1)	1 x 2116	70	3.5	Middle 1 and middle 2	35
Core (h_2)	FR4	710	5.0	Bottom	35

The Tx and Rx lines detailed in the figures below can then be built from this configuration.

Figure 34. Tx 50 ohms RF tracks (case 1, PCB total = 1.04 mm)


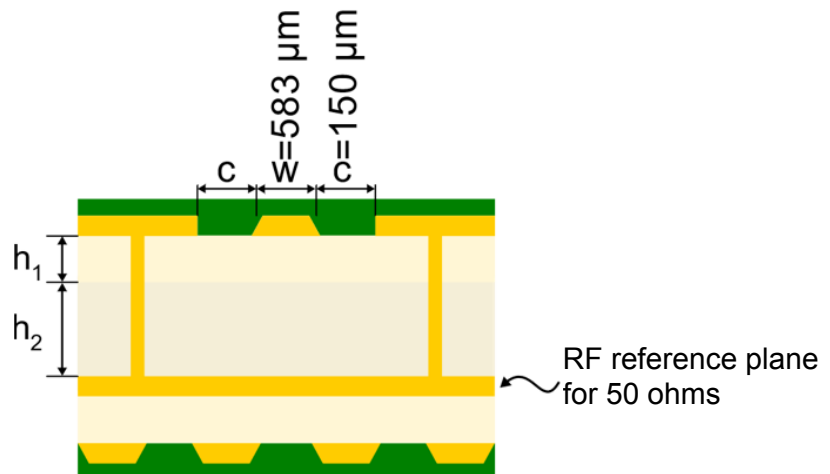


Figure 35. Rx 100 ohms differential pair (case 1, PCB total = 1.04 mm)

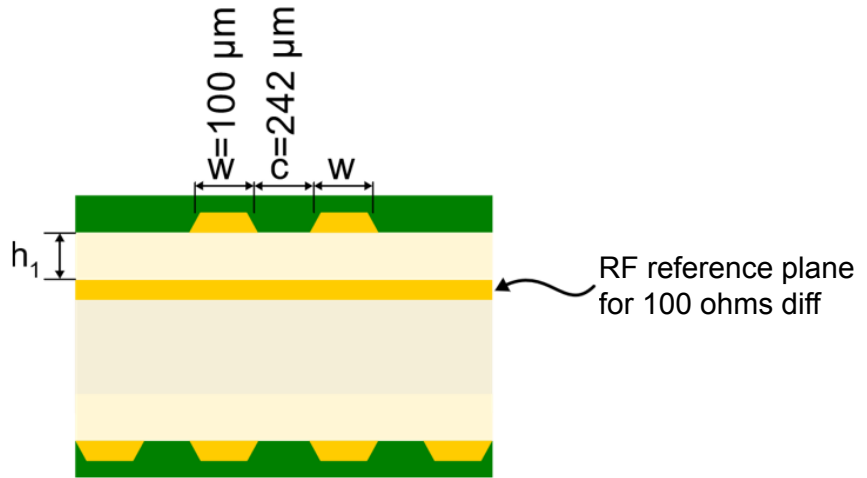

- **Case 2:** typical stack-up for BGA package with **PCB total thickness = 1.10 mm**. Consider configuration detailed in the table below.

Table 14. Case 2: PCB total thickness = 1.10 mm

Dielectric materials				Metal layers	
Element	Material	Nominal thickness h_x (μm)	ϵ_r	Layer	Nominal thickness t (μm)
Solder mask (h_3)	solder resist	20	3.3	Top	35
Prepreg 1 (h_1)	1 x 2116	108	3.8	Middle 1 and middle 2	35
Core (h_2)	FR4	710	5.0	Bottom	35

The Tx and Rx lines detailed in the figures below can then be built from this configuration.

Figure 36. Tx 50 Ω RF tracks (case 2, PCB total = 1.10 mm)


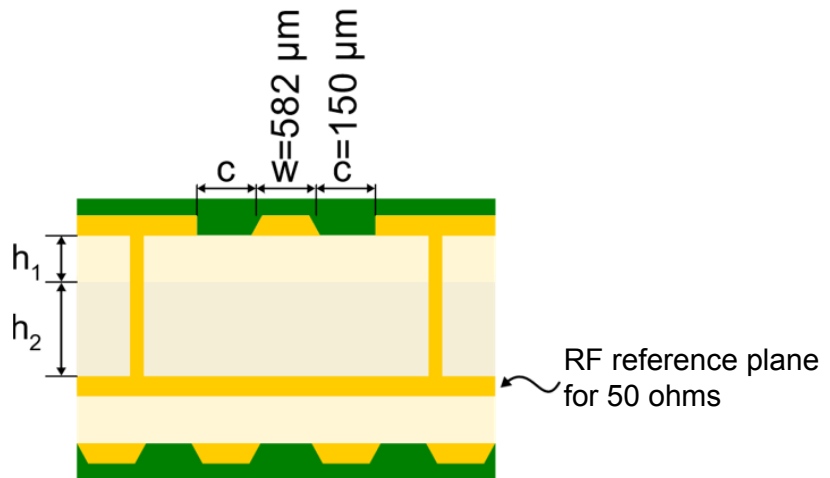


Figure 37. Rx 100 Ω differential pair (case 2, PCB total = 1.10 mm)

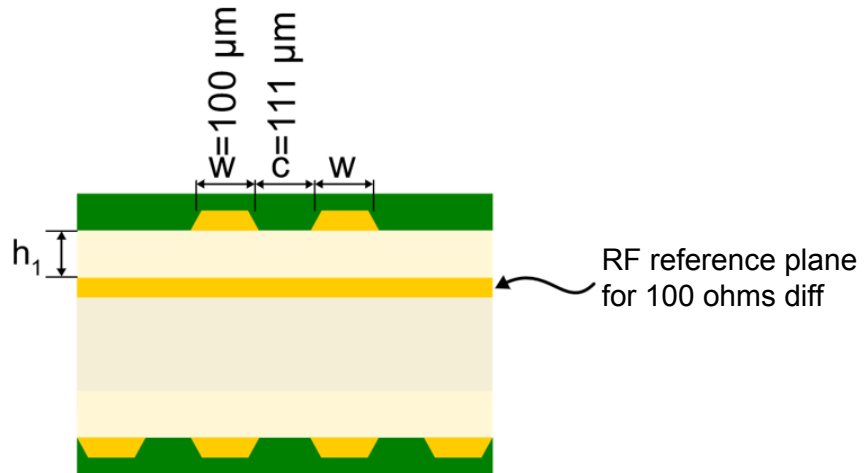

- **Case 3:** typical stack-up for BGA package with **PCB total thickness = 1.60 mm**. Consider configuration detailed in the table below.

Table 15. Case 3: PCB total thickness = 1.60 mm

Dielectric materials				Metal layers	
Element	Material	Nominal thickness h_x (μm)	ϵ_r	Layer	Nominal thickness t (μm)
Solder mask (h_3)	solder resist	20	3.5	Top	35
Prepreg 1 (h_1)	1 x 1080	76	4.18	Middle 1 and 2	35
Core (h_2)	7 x 7628	1268	4.74	Bottom	35

The Tx and Rx lines details in the figures below can then be built from this configuration.

Figure 38. Tx 50 Ω RF tracks (case 3, PCB total = 1.60 mm)


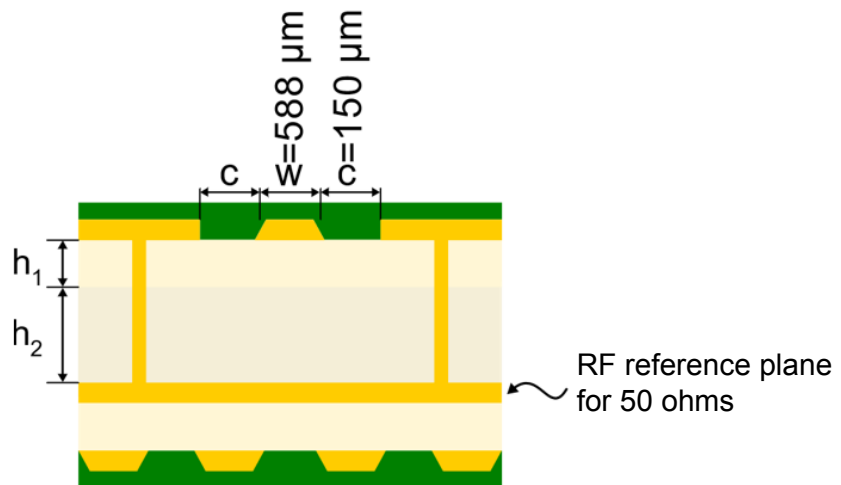


Figure 39. Rx 100 Ω differential pair (case 3, PCB total = 1.60 mm)

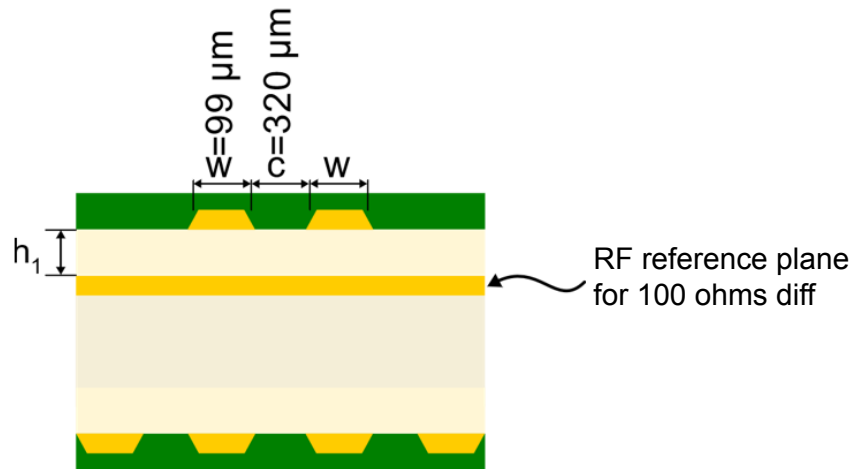

Important:

The longer the distance is between the source and the antenna, the greater the potential for loss of energy in the RF transmission line. As a design rule, RF transmission lines must be as short as possible and without discontinuities.

Revision history

Table 16. Document revision history

Date	Version	Changes
6-Mar-2020	1	Initial release.

Contents

1	Main rules summary	2
2	Characteristic and controlled impedance	3
3	RF transmission line	7
3.1	Stack-up board	7
3.2	Stack-ups for Tx 50 Ω and Rx 100 Ω	7
3.3	Metal cutout for impedance control	8
4	Surface mounted components with RF signals	11
4.1	Capacitors	11
4.2	Inductors	13
5	Via stitching and shielding	14
6	RF return current path	15
7	Discontinuities to avoid in transmission lines	17
8	Bends with RF lines	21
9	Minimize unintentional radiation	23
9.1	RFO harmonics	23
9.2	High-frequency signals on board outline	24
9.3	Ground flooding	25
9.4	Metal shield	25
9.5	Power planes	26
10	Decoupling capacitors	27
11	STM32WL reference layout	28
12	Documentation references	31
13	Conclusion	33
Appendix A	Stack-up examples	34
	Revision history	38
	Contents	39
	List of tables	40
	List of figures	41

List of tables

Table 1.	Characteristic impedance and impact on RF measures (load impedance = 50 Ω)	6
Table 2.	Capacitor pads with RF signals	11
Table 3.	Inductor pads with RF signals	13
Table 4.	Return paths	15
Table 5.	Layout discontinuities	17
Table 6.	Track transitions	18
Table 7.	Test points	18
Table 8.	Pad component width	19
Table 9.	RF switch transitions	19
Table 10.	Package pad to RF line transitions	20
Table 11.	Guidelines for bends in RF lines	22
Table 12.	Return currents for decoupling capacitors	27
Table 13.	Case 1: PCB total thickness = 1.04 mm	34
Table 14.	Case 2: PCB total thickness = 1.10 mm	35
Table 15.	Case 3: PCB total thickness = 1.60 mm	36
Table 16.	Document revision history	38

List of figures

Figure 1.	Example of a GCPW in a 2-layer PCB	3
Figure 2.	Example of a transmission line type GCPW on PCB	4
Figure 3.	Stack-up example for 4-layer PCB.	4
Figure 4.	Characteristic impedance versus width variation	5
Figure 5.	Characteristic impedance versus clearance variation	5
Figure 6.	Example of schematic with controlled impedance identified	6
Figure 7.	Typical 4-layer PCB stack-up with three different types of vias	7
Figure 8.	50 Ω transmission lines in various layers	8
Figure 9.	Width of metal cutout in middle layer 1 equal to the width of transmission plus clearance	8
Figure 10.	Example 1: internal cutout equal to w (width)	9
Figure 11.	Example 2: internal cutout greater than w.	9
Figure 12.	Example 3: internal cutout smaller than w	10
Figure 13.	Example 4: internal cutout much smaller than w	10
Figure 14.	Example of capacitors on RF lines	12
Figure 15.	Thermal reliefs	12
Figure 16.	Spacing between vias around GCPW	14
Figure 17.	Clean return path example for RF currents.	16
Figure 18.	90° bend example.	21
Figure 19.	Ideal case: straight line	21
Figure 20.	Typical circuit for RFO harmonics	23
Figure 21.	EM radiation generated by HF signals	24
Figure 22.	How to mitigate unintentional EM radiation	24
Figure 23.	PCB example with or without ground flooding.	25
Figure 24.	PCB example with or without metal shield	25
Figure 25.	GND and power planes	26
Figure 26.	Decoupling capacitors	27
Figure 27.	High-frequency equivalent model of a capacitor	27
Figure 28.	All layers of STM32WL reference layout for BGA	28
Figure 29.	Top layer of STM32WL reference layout for BGA	28
Figure 30.	Middle layer 1 of STM32WL reference layout for BGA	29
Figure 31.	Middle layer 2 of STM32WL reference layout for BGA	29
Figure 32.	Bottom layer of STM32WL reference layout for BGA	30
Figure 33.	Typical stack-up for BGA package.	34
Figure 34.	Tx 50 ohms RF tracks (case 1, PCB total = 1.04 mm)	34
Figure 35.	Rx 100 ohms differential pair (case 1, PCB total = 1.04 mm).	35
Figure 36.	Tx 50 Ω RF tracks (case 2, PCB total = 1.10 mm)	35
Figure 37.	Rx 100 Ω differential pair (case 2, PCB total = 1.10 mm)	36
Figure 38.	Tx 50 Ω RF tracks (case 3, PCB total = 1.60 mm)	36
Figure 39.	Rx 100 Ω differential pair (case 3, PCB total = 1.60 mm)	37

IMPORTANT NOTICE – PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries (“ST”) reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST’s terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers’ products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, please refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2020 STMicroelectronics – All rights reserved